

Dashboard


- [Lifting plan tile](#)

Lifting plan tile

How to manage lifting plans with the Smart Jobsite Application

Add the lifting plan tile


When you start the Smart Jobsite application, after the login you have access to the dashboard

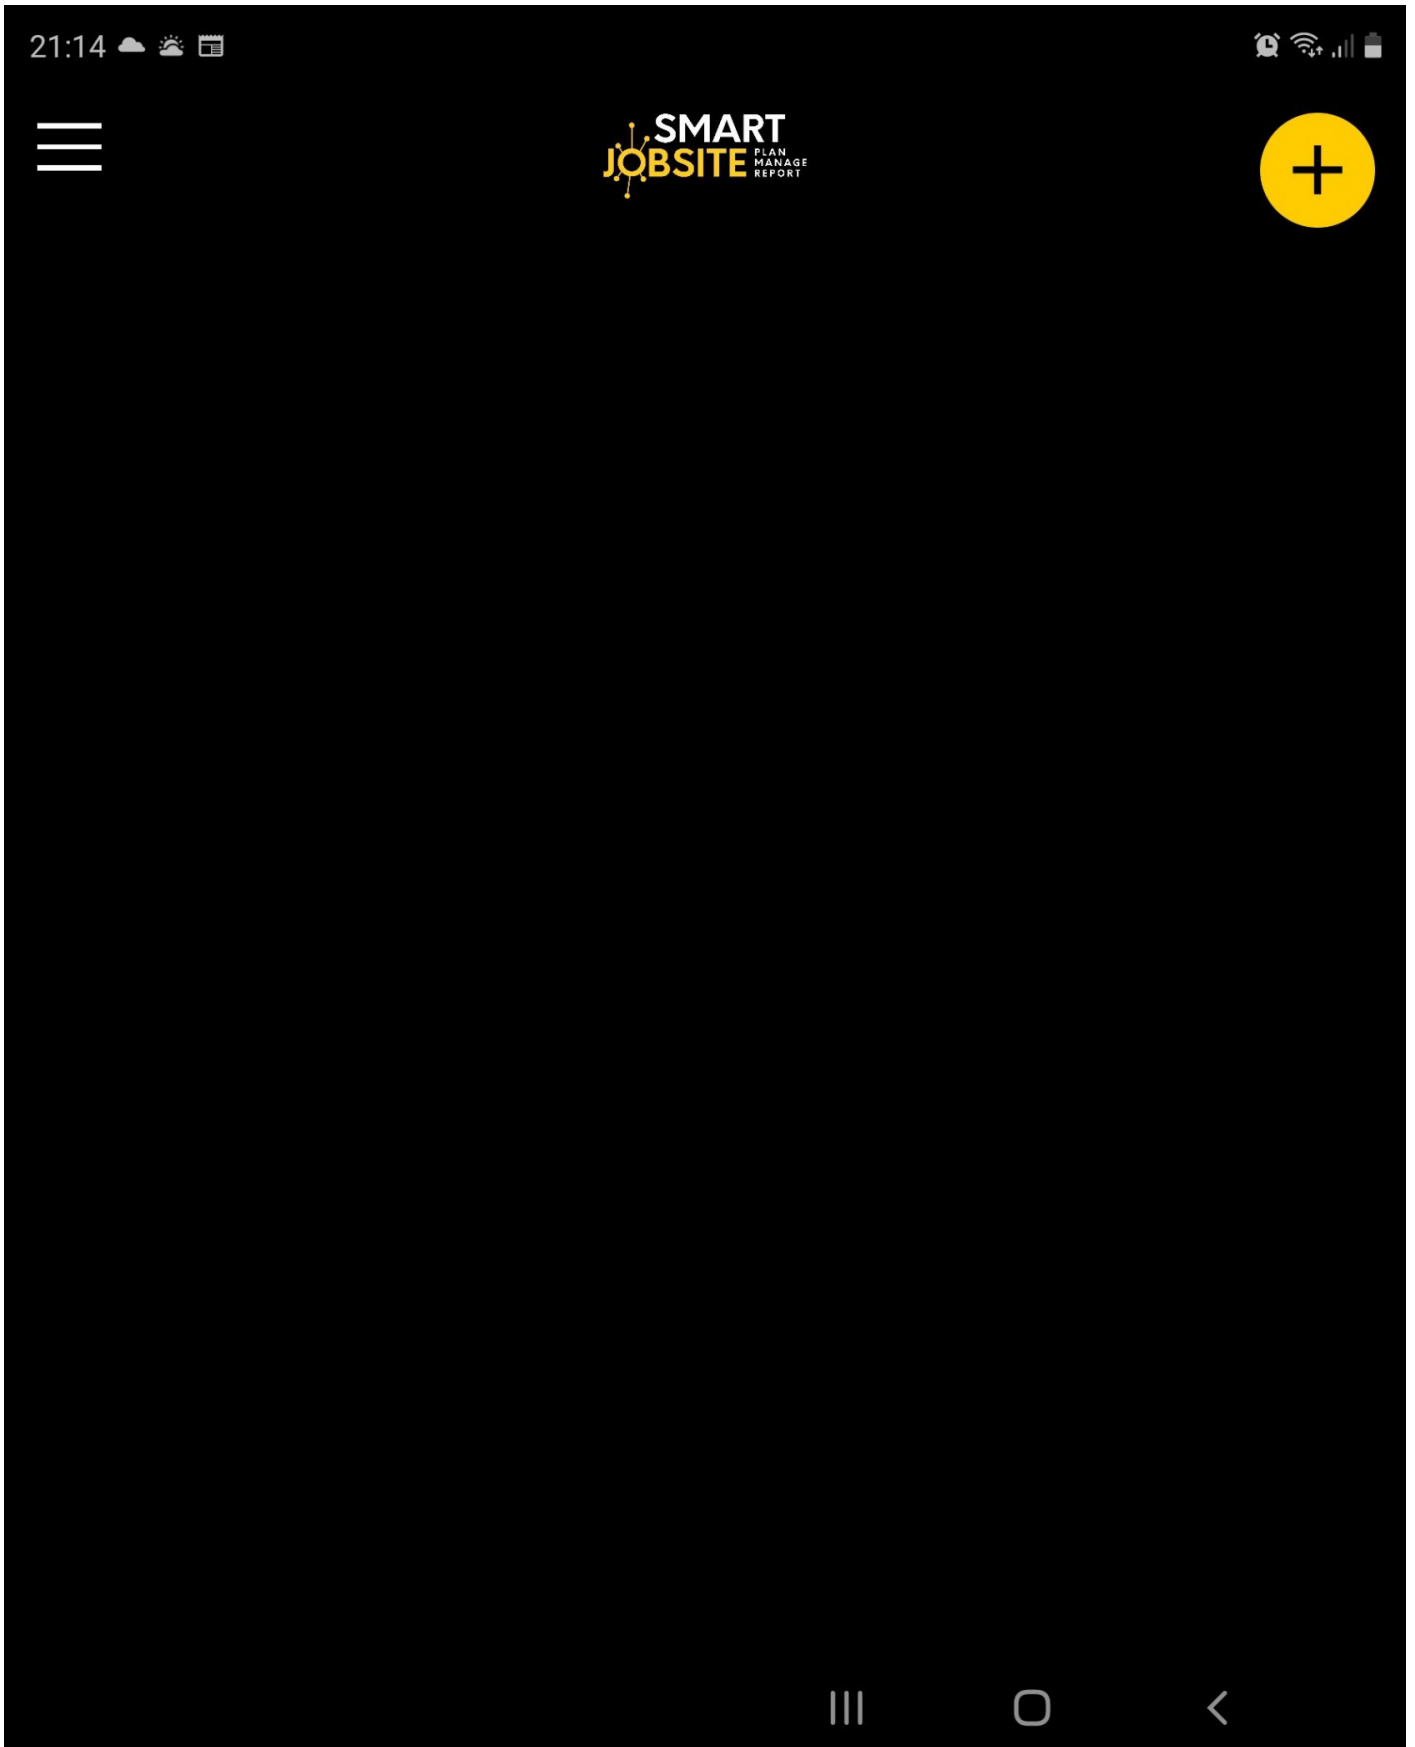


To add the lifting plan tile you can click on the + button. Then click on the tile button under the + Button



The ifting plan tile will be instantiated

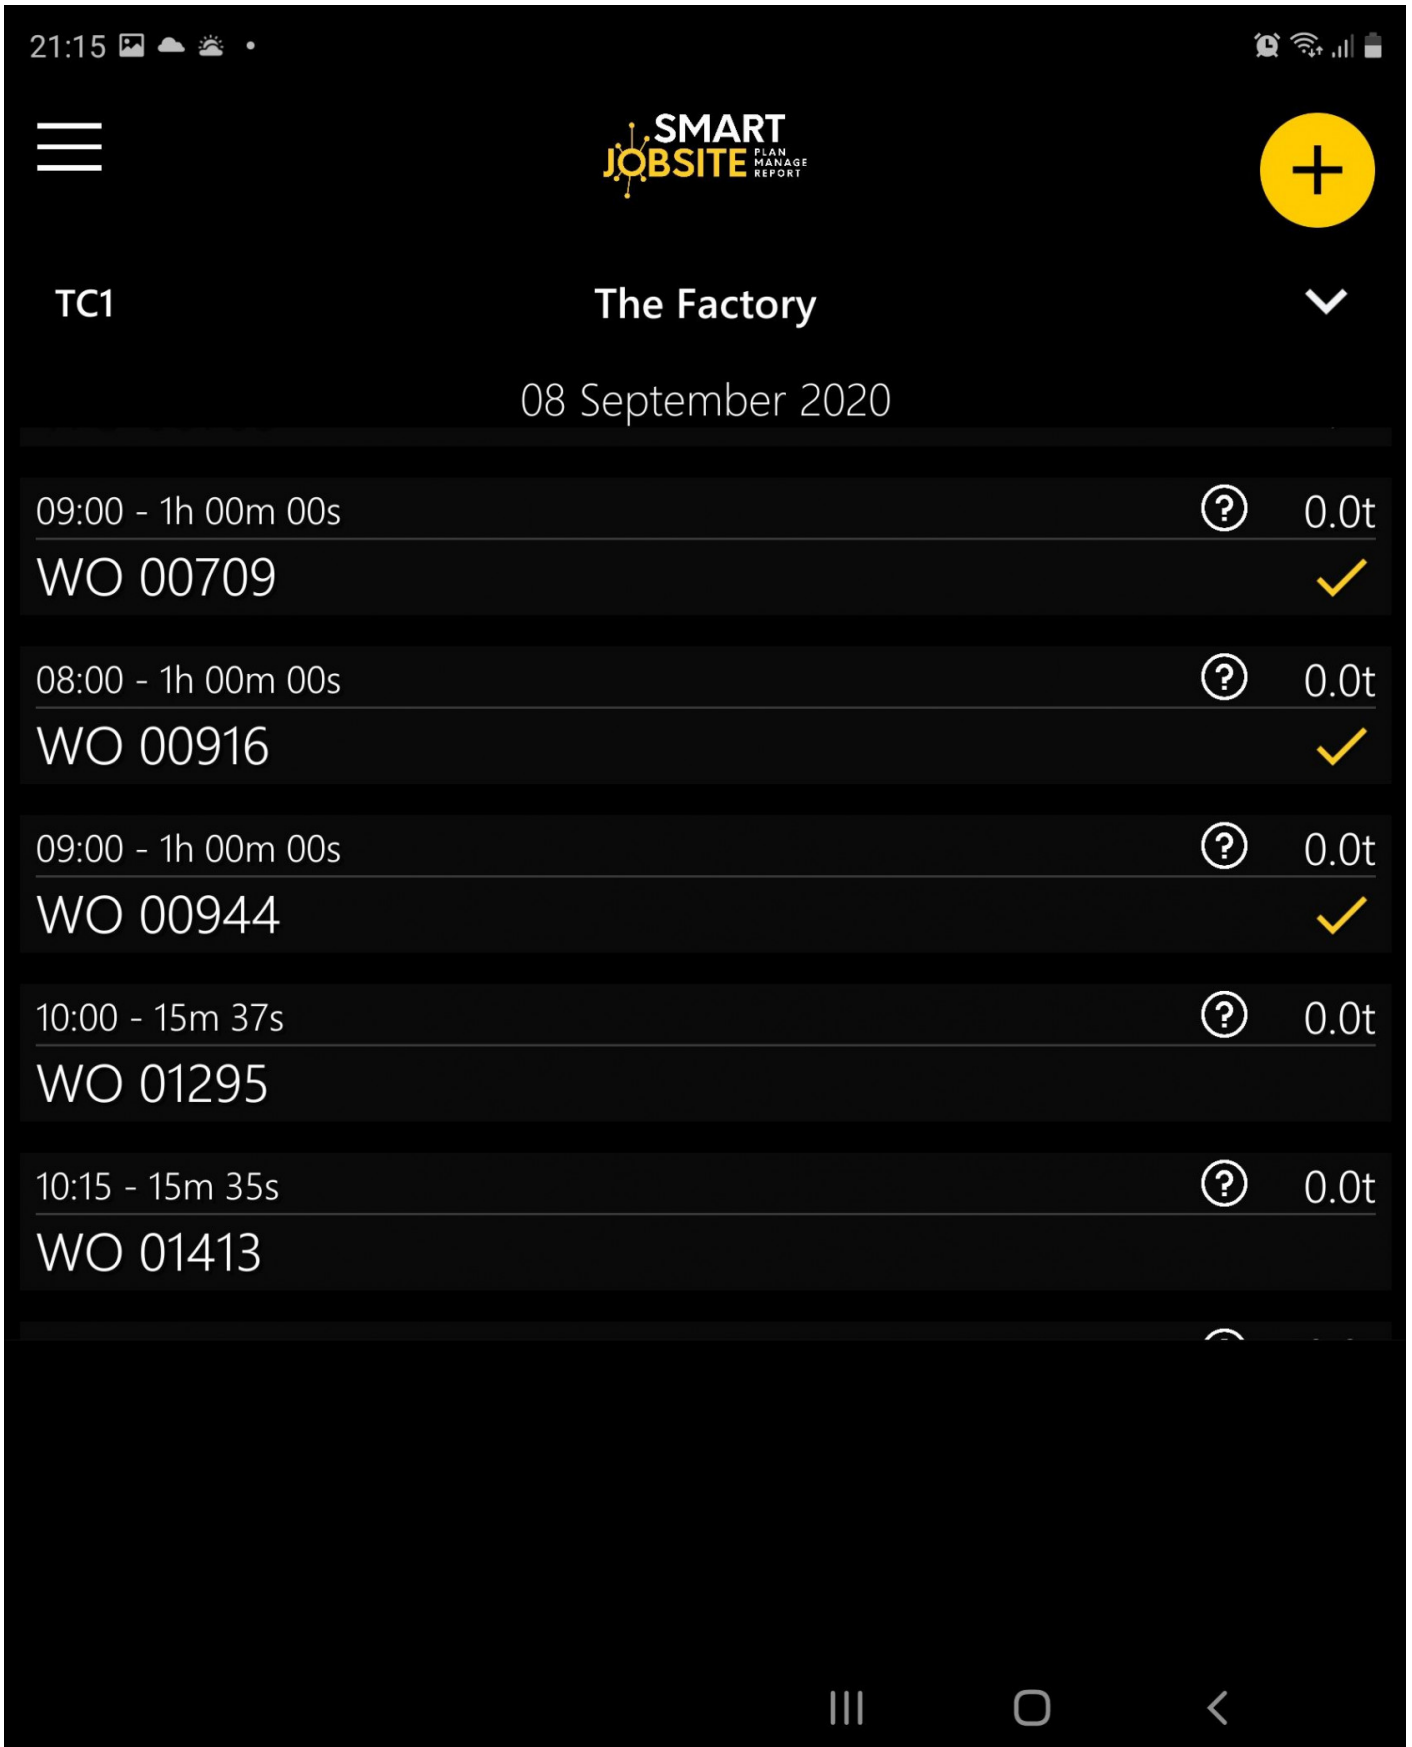

Tile menu

 You can click on the  button to access the tile menu



TC1

The Factory



08 September 2020

09:00 - 1h 00m 00s



0.0t

WO 00709



08:00 - 1h 00m 00s



WO 00916

09:00 - 1h 00m 00s



0.0t

WO 00944



10:00 - 15m 37s



0.0t

WO 01295

10:15 - 15m 35s




0.0t

 
WO 01413







Scan a QR code

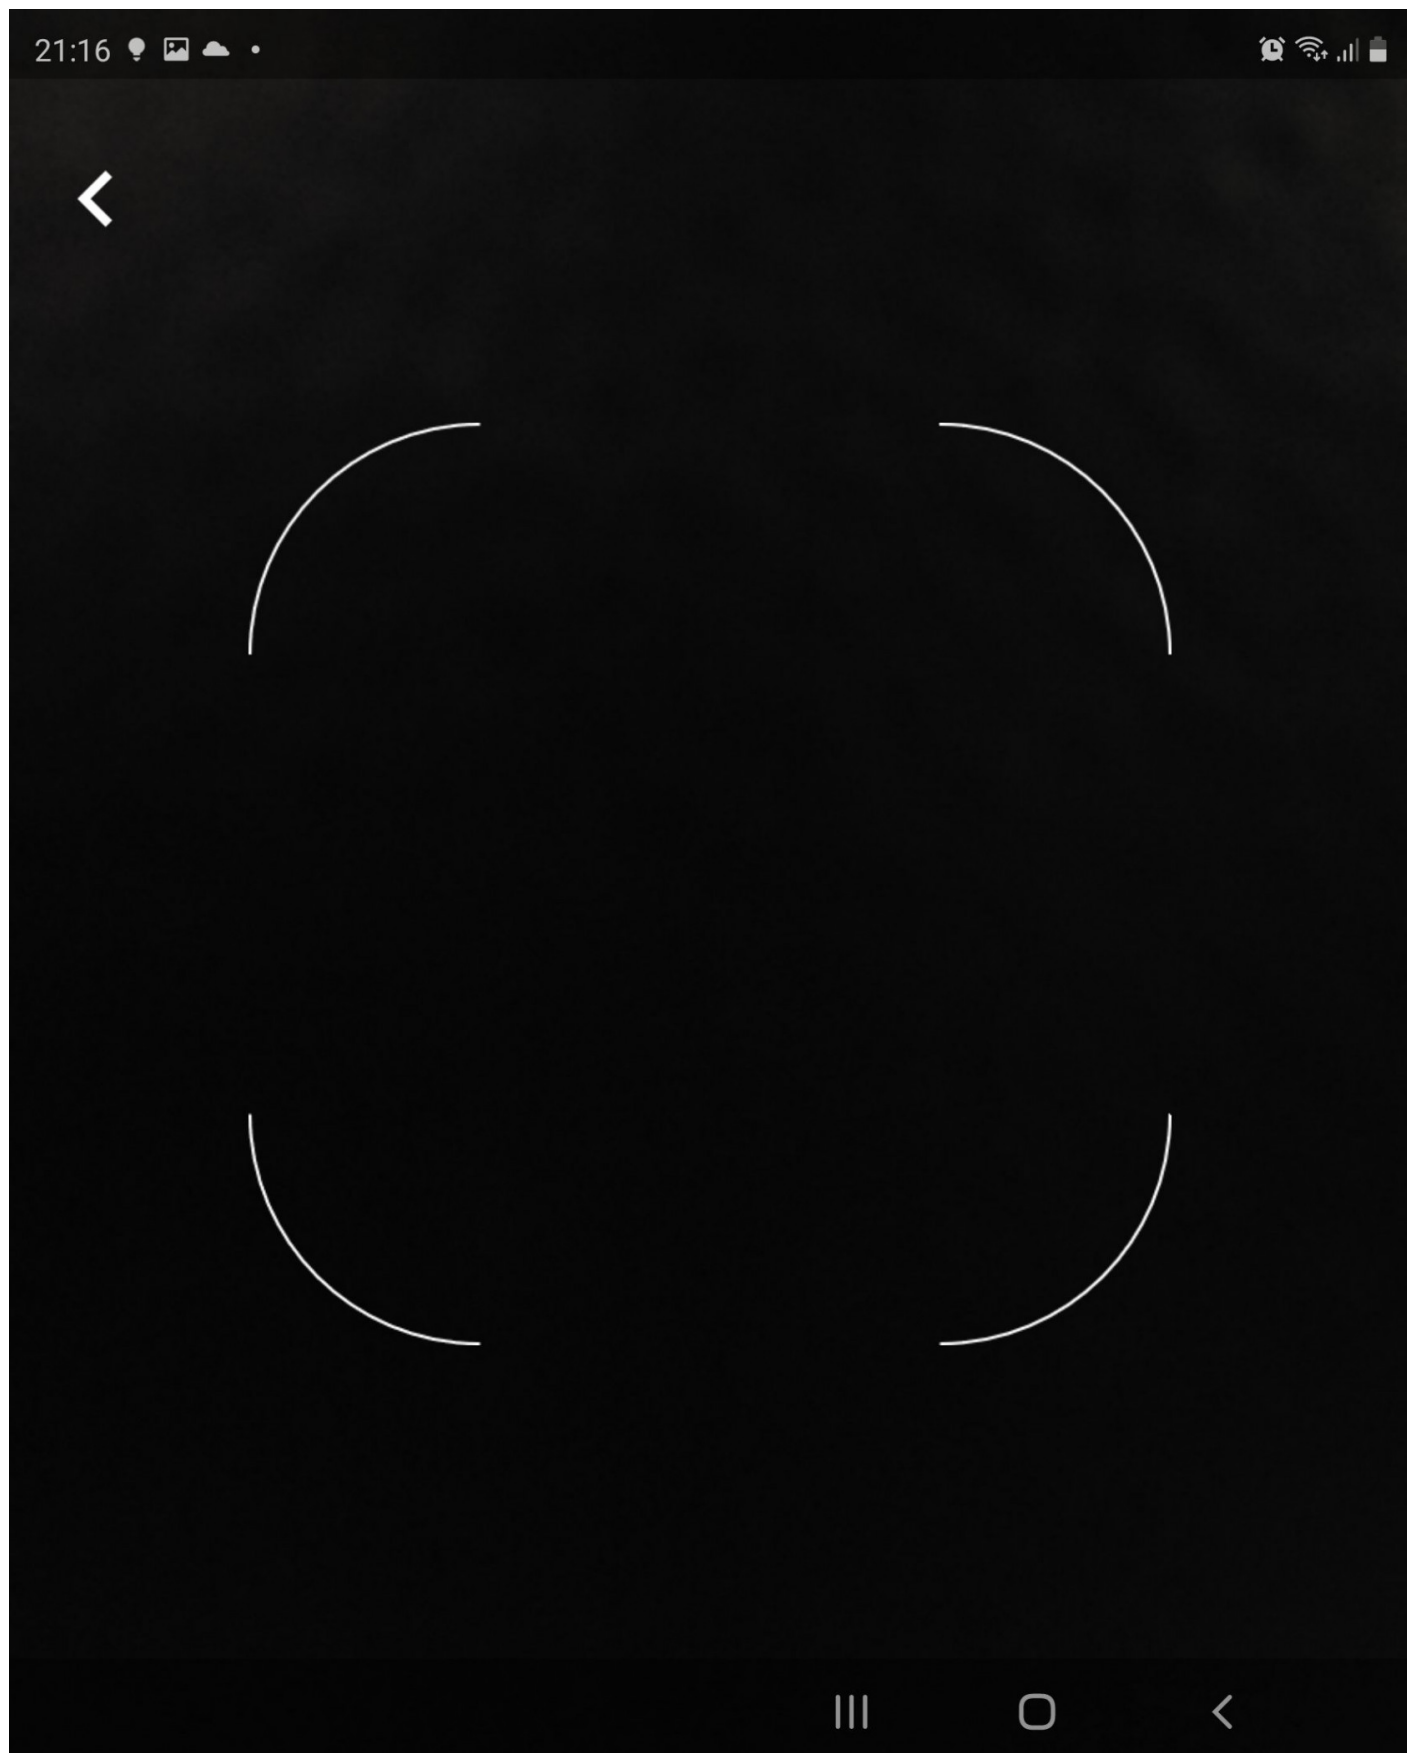




From the tile menu you can click on the button to launch the QR code









Once the qr code is scanned you will have access to the following window



21:46    

WO 01295

Elingage

Typical Products: Beams and Walls (including Twinwall, Sandwich Panels and Solid Wall)					
Recommended Equipment					
2 Leg Chains	3 Leg Chains	4 Leg Chains	Equaliser	Beam	Air-hoist
					
1	0	0	0	0	0


Notes:
Tilt table may first be required.

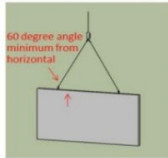
Lift Type: 1A

Number of Lifting Points: 2

Pitch unit from horizontal to vertical allowed?
 No


2 Point Lift – No Pitching






1A 

200 Kg
2 Lifting Points
riggig type 1a

Elements

 1781A-WH05FA-206
Walls
0.00t

Thanksto this window you can see the detail of the scanned part like :

- the rigging infotmations

- the part informations



To start the lifting you can click on the button at the top right of the window.

You will go back to this window and the processing task will blink



TC1

The Factory



09 September 2020

vvv 00944



09:49 - 15m 37s



0.0t

WO 01295

10:00 - 22s



0.0t

WO 01136

ooo



10:15 - 15m 35s



0.0t

WO 01413

10:31 - 15m 34s



0.0t

WO 01471

 
10:47 - 15m 33s

 


0.0t




Add a new lift



To add a new lift you can click on the  button. A new task will be created you can then edit it if you want


refresh the tile

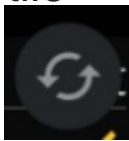


You can use the  button to refresh the tile if needed

Change jobsite or crane

The lifting plan tile is associated to a jobsite and a crane. You can access to the settings to change it.

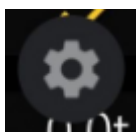

If you click on the setting button  to access to the following page [

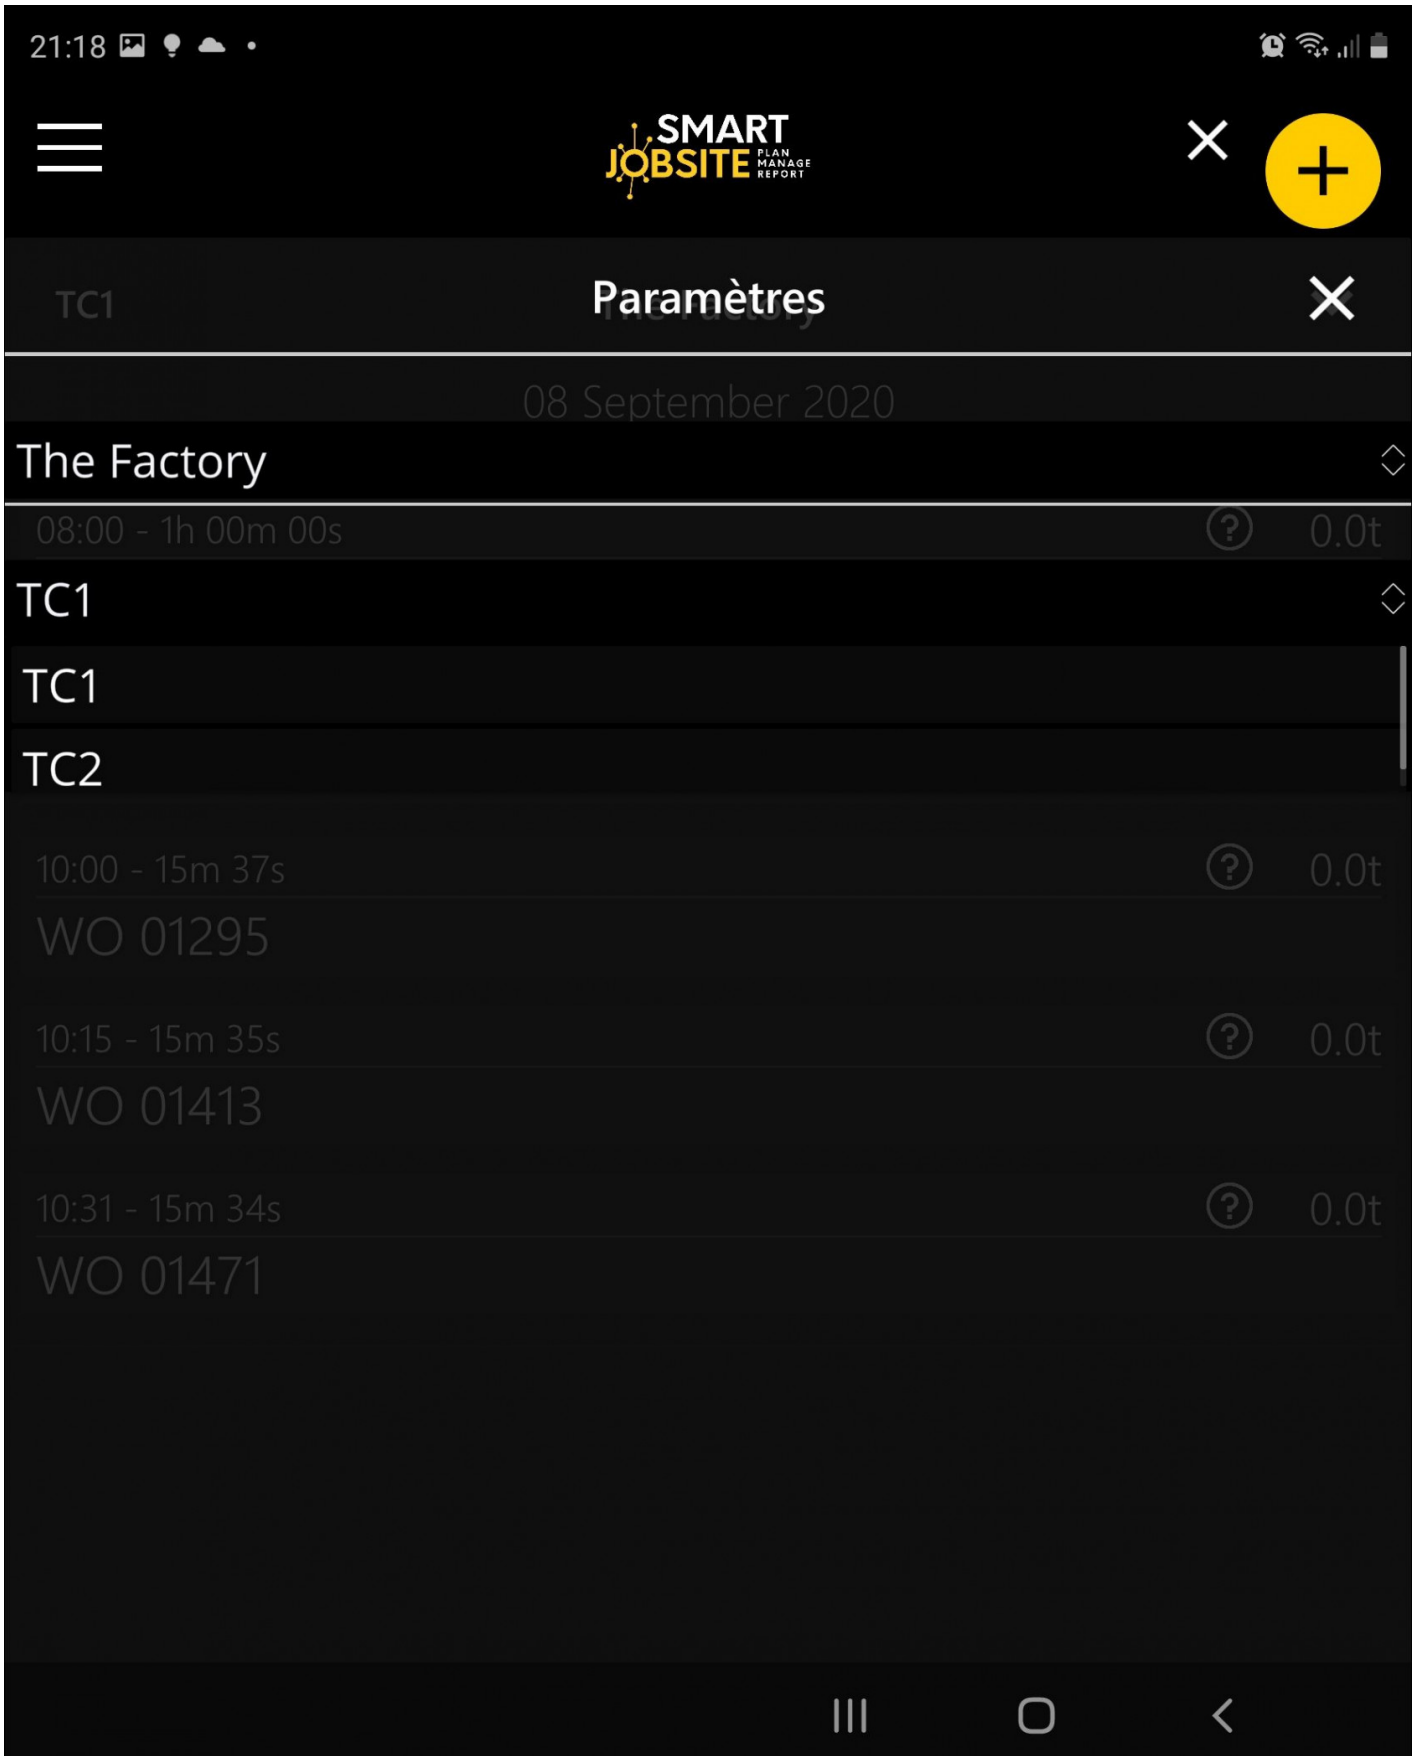

] (<https://bookstack.smartjobsite.com/uploads/images/gallery/2021-01/image-1611262417014.jpg>)

You can use the two dropdowns to change the Jobsite and / or the crane

Delete the tile



You can use the button to delete the tile