

# Smart Jobsite Application

- Dashboard
  - Lifting plan tile


# Dashboard

# Lifting plan tile


## How to manage lifting plans with the Smart Jobsite Application

### Add the lifting plan tile


When you start the Smart Jobsite application, after the login you have access to the dashboard

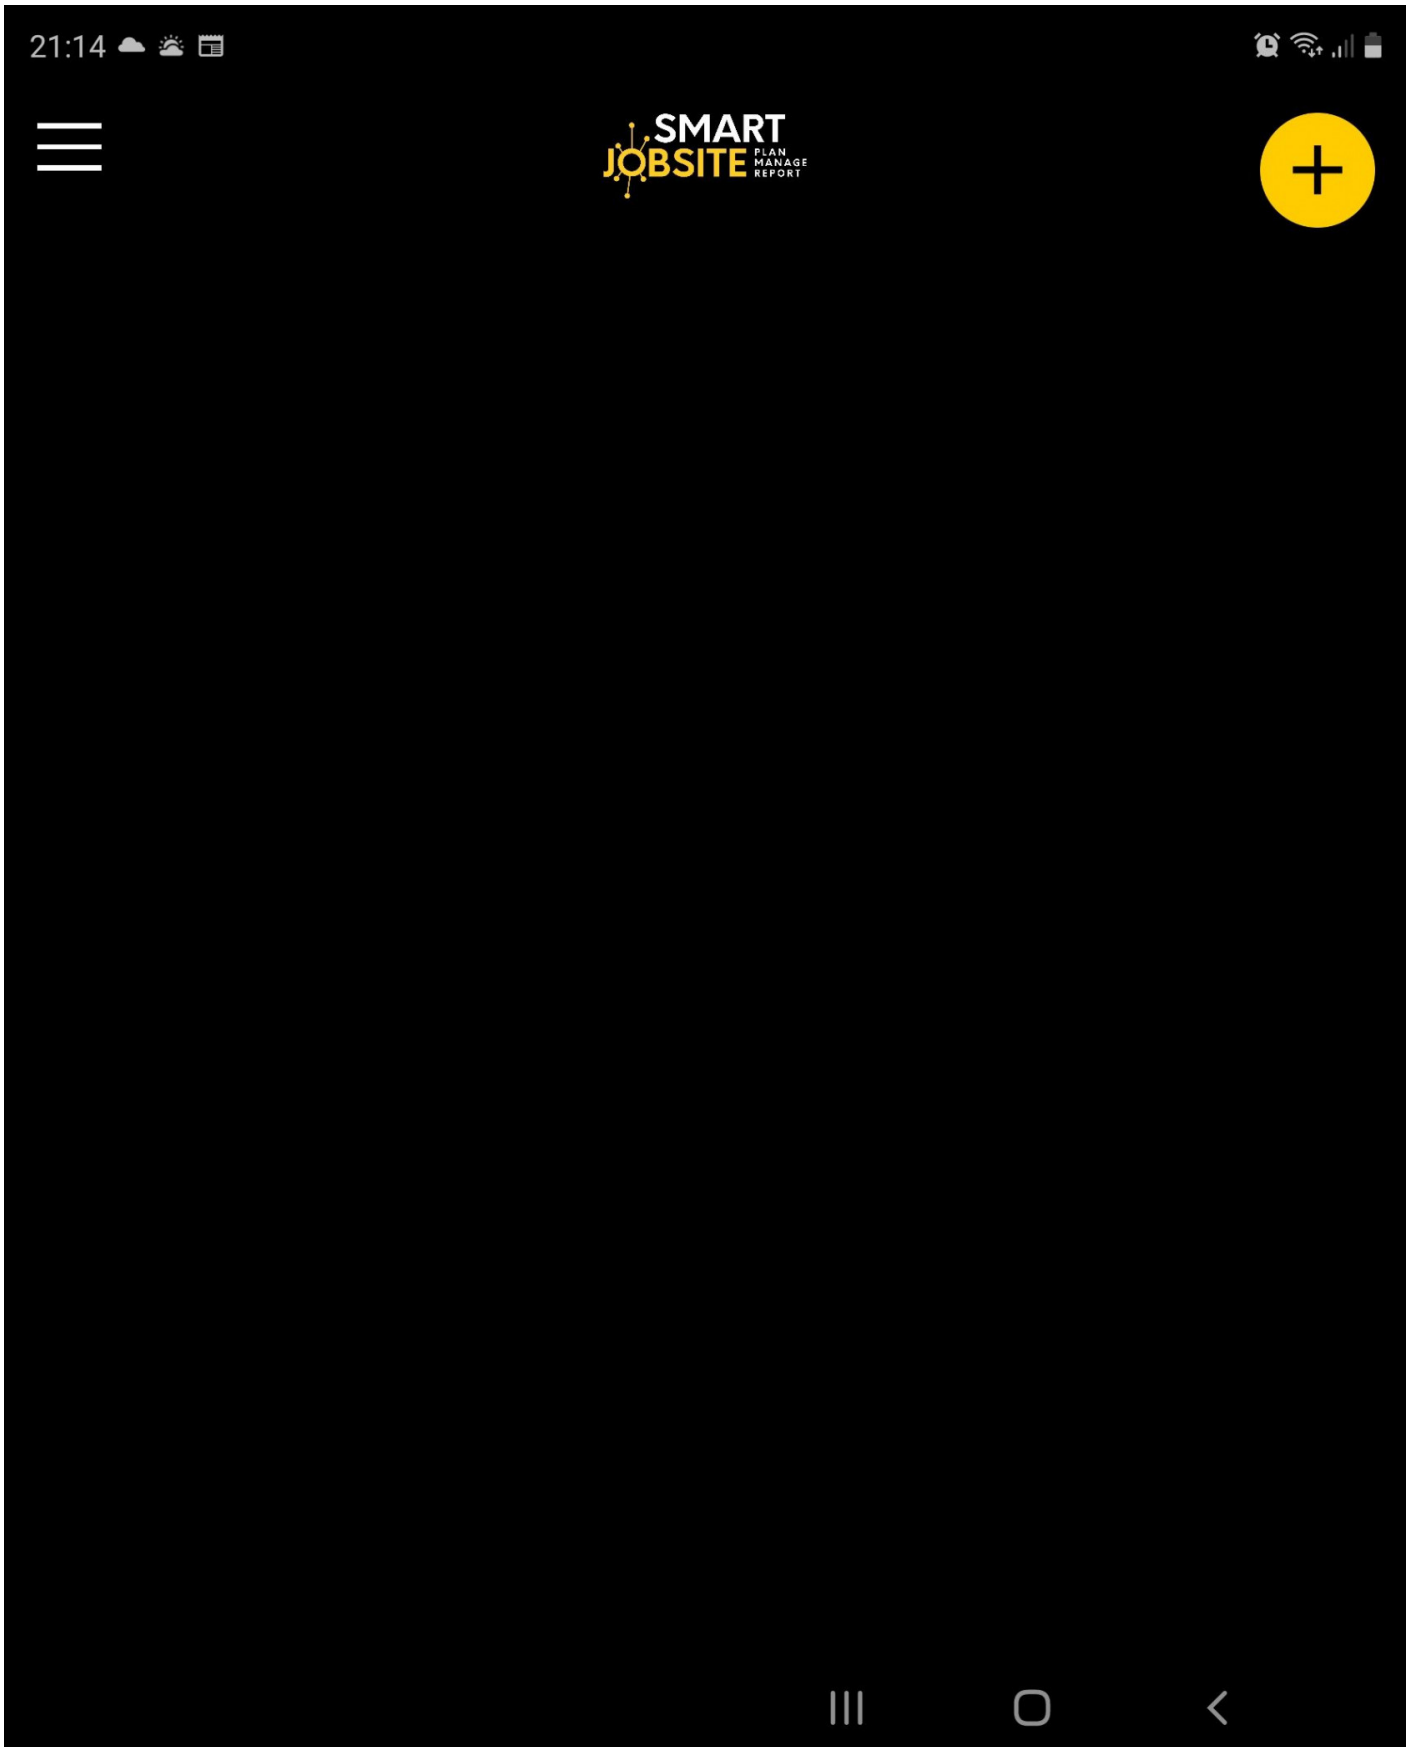

To add the lifting plan tile you can click on the + button. Then click on the tile button under the + Button

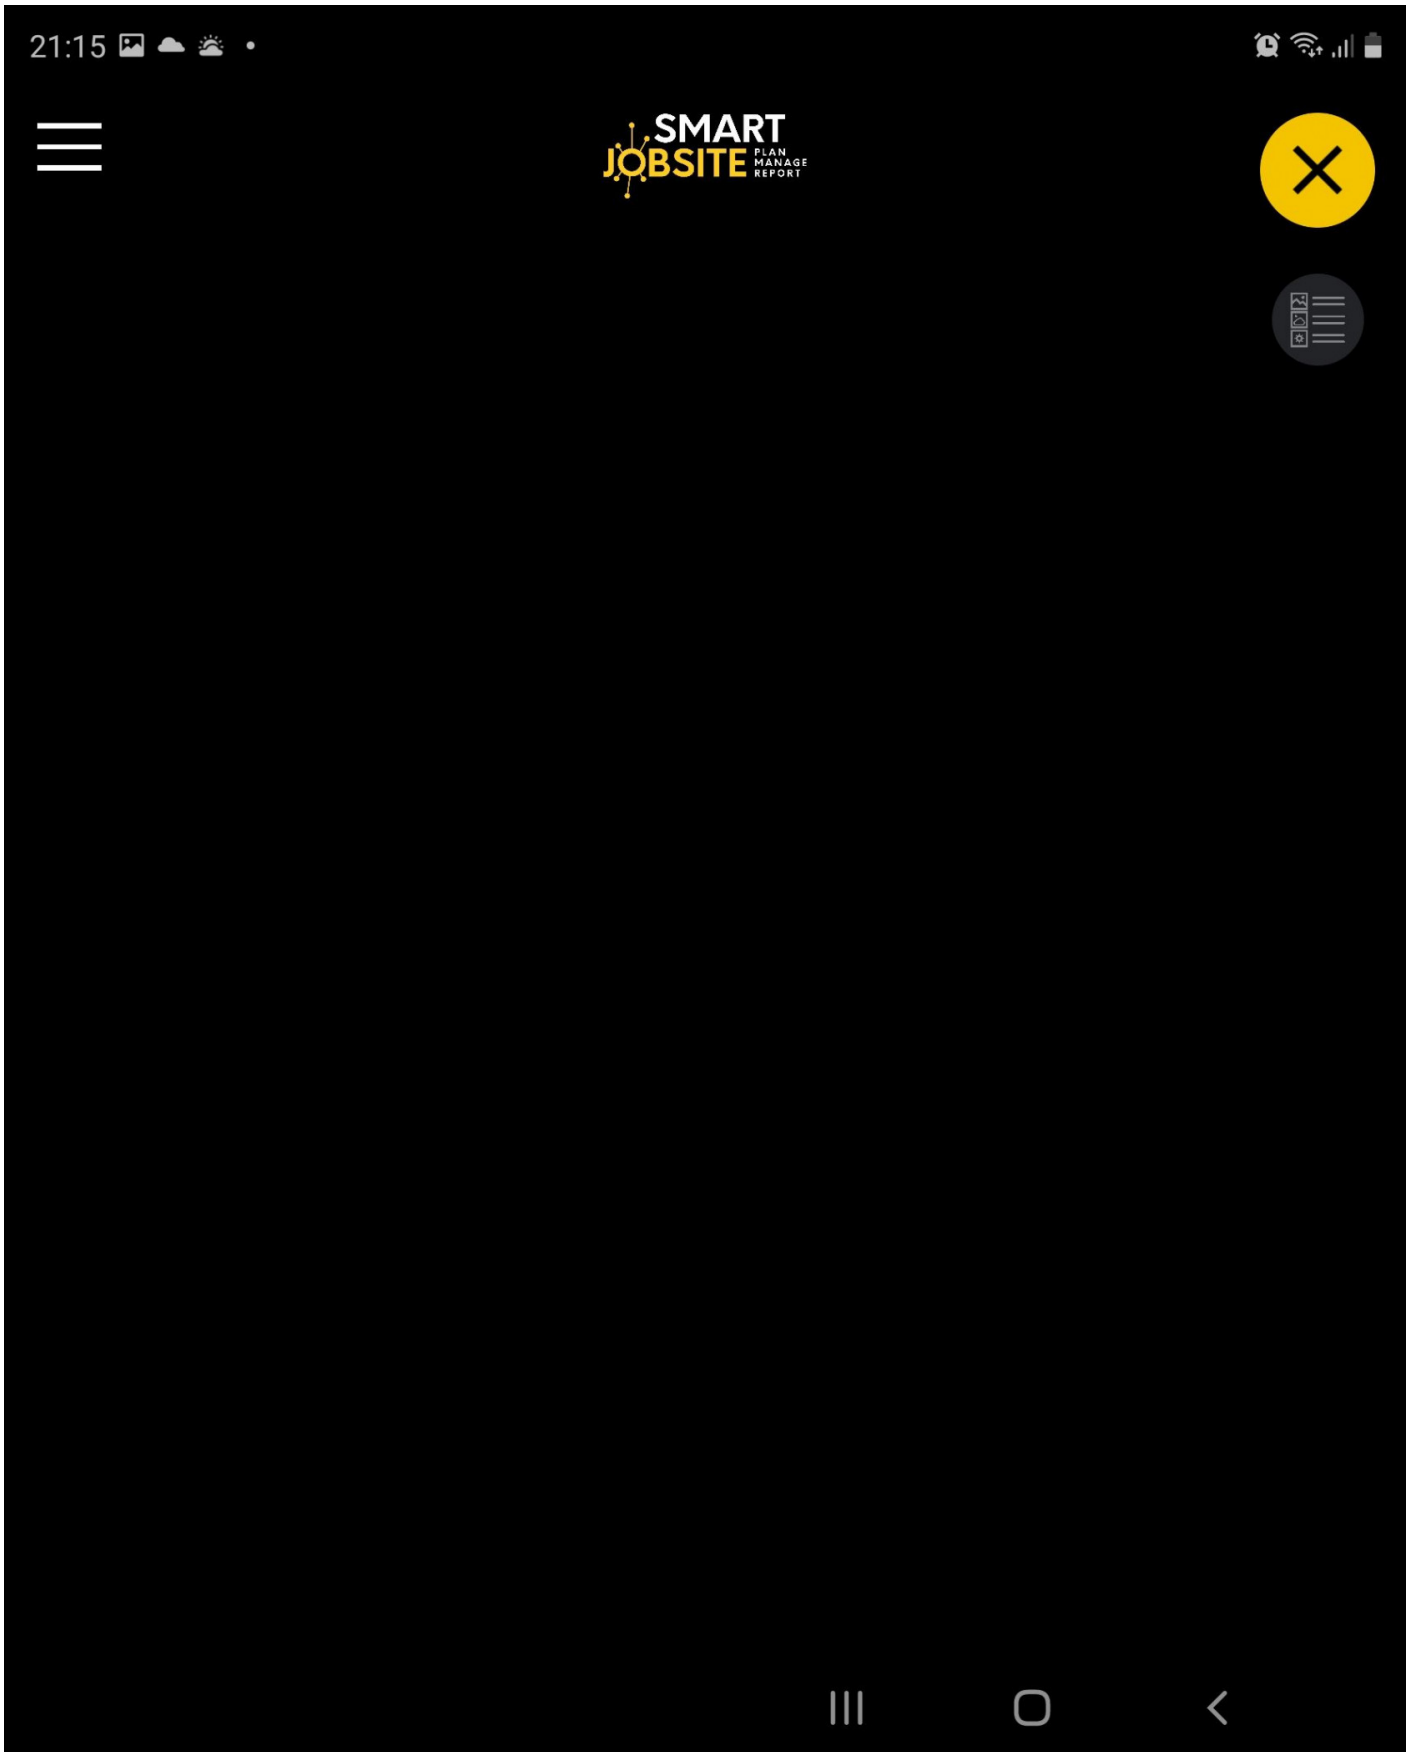


The ifting plan tile will be instantiated

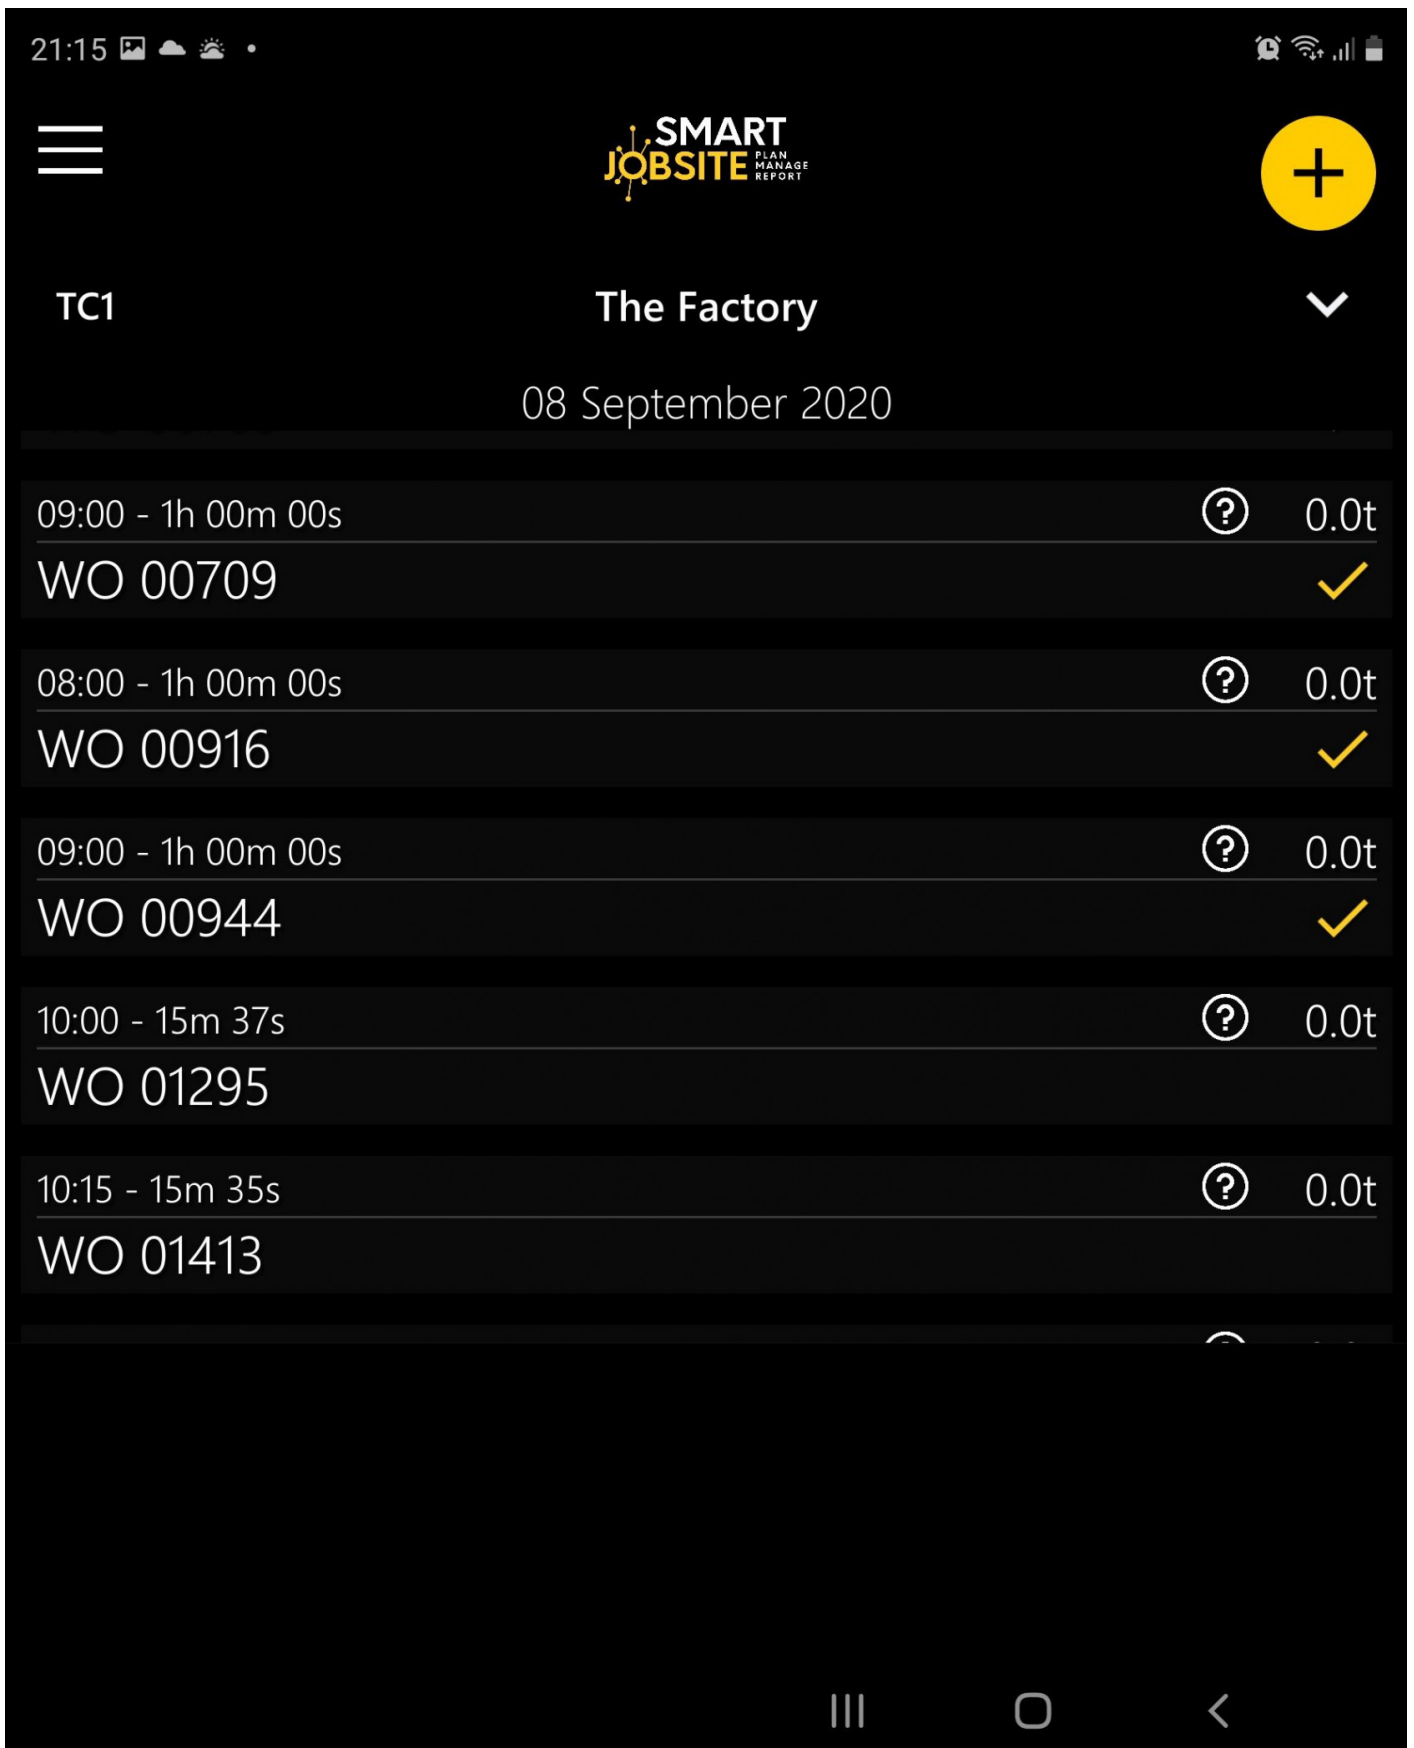


## Tile menu


You can click on the  button to access the tile menu

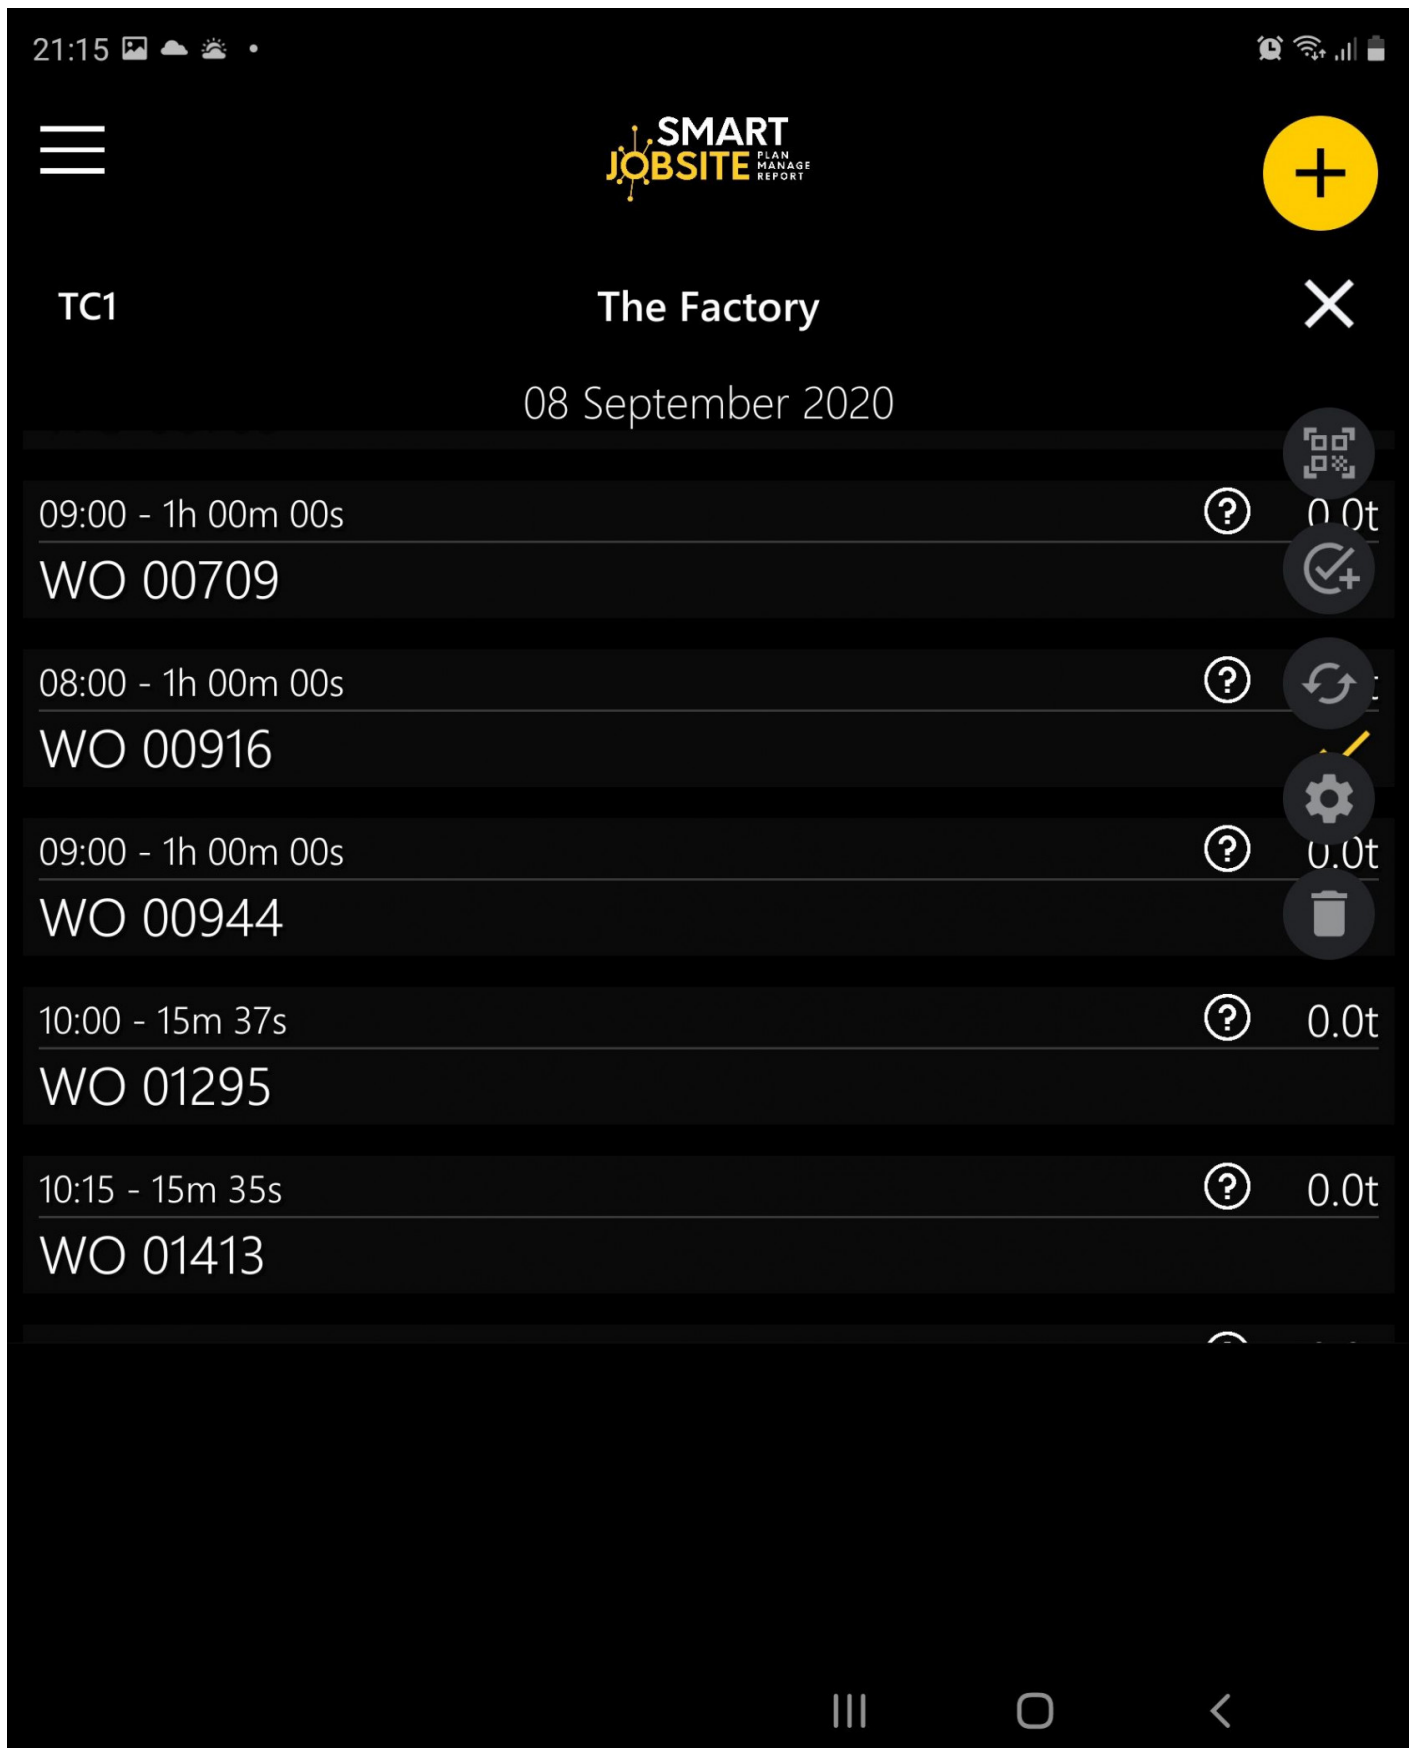

Scan a QR code

 



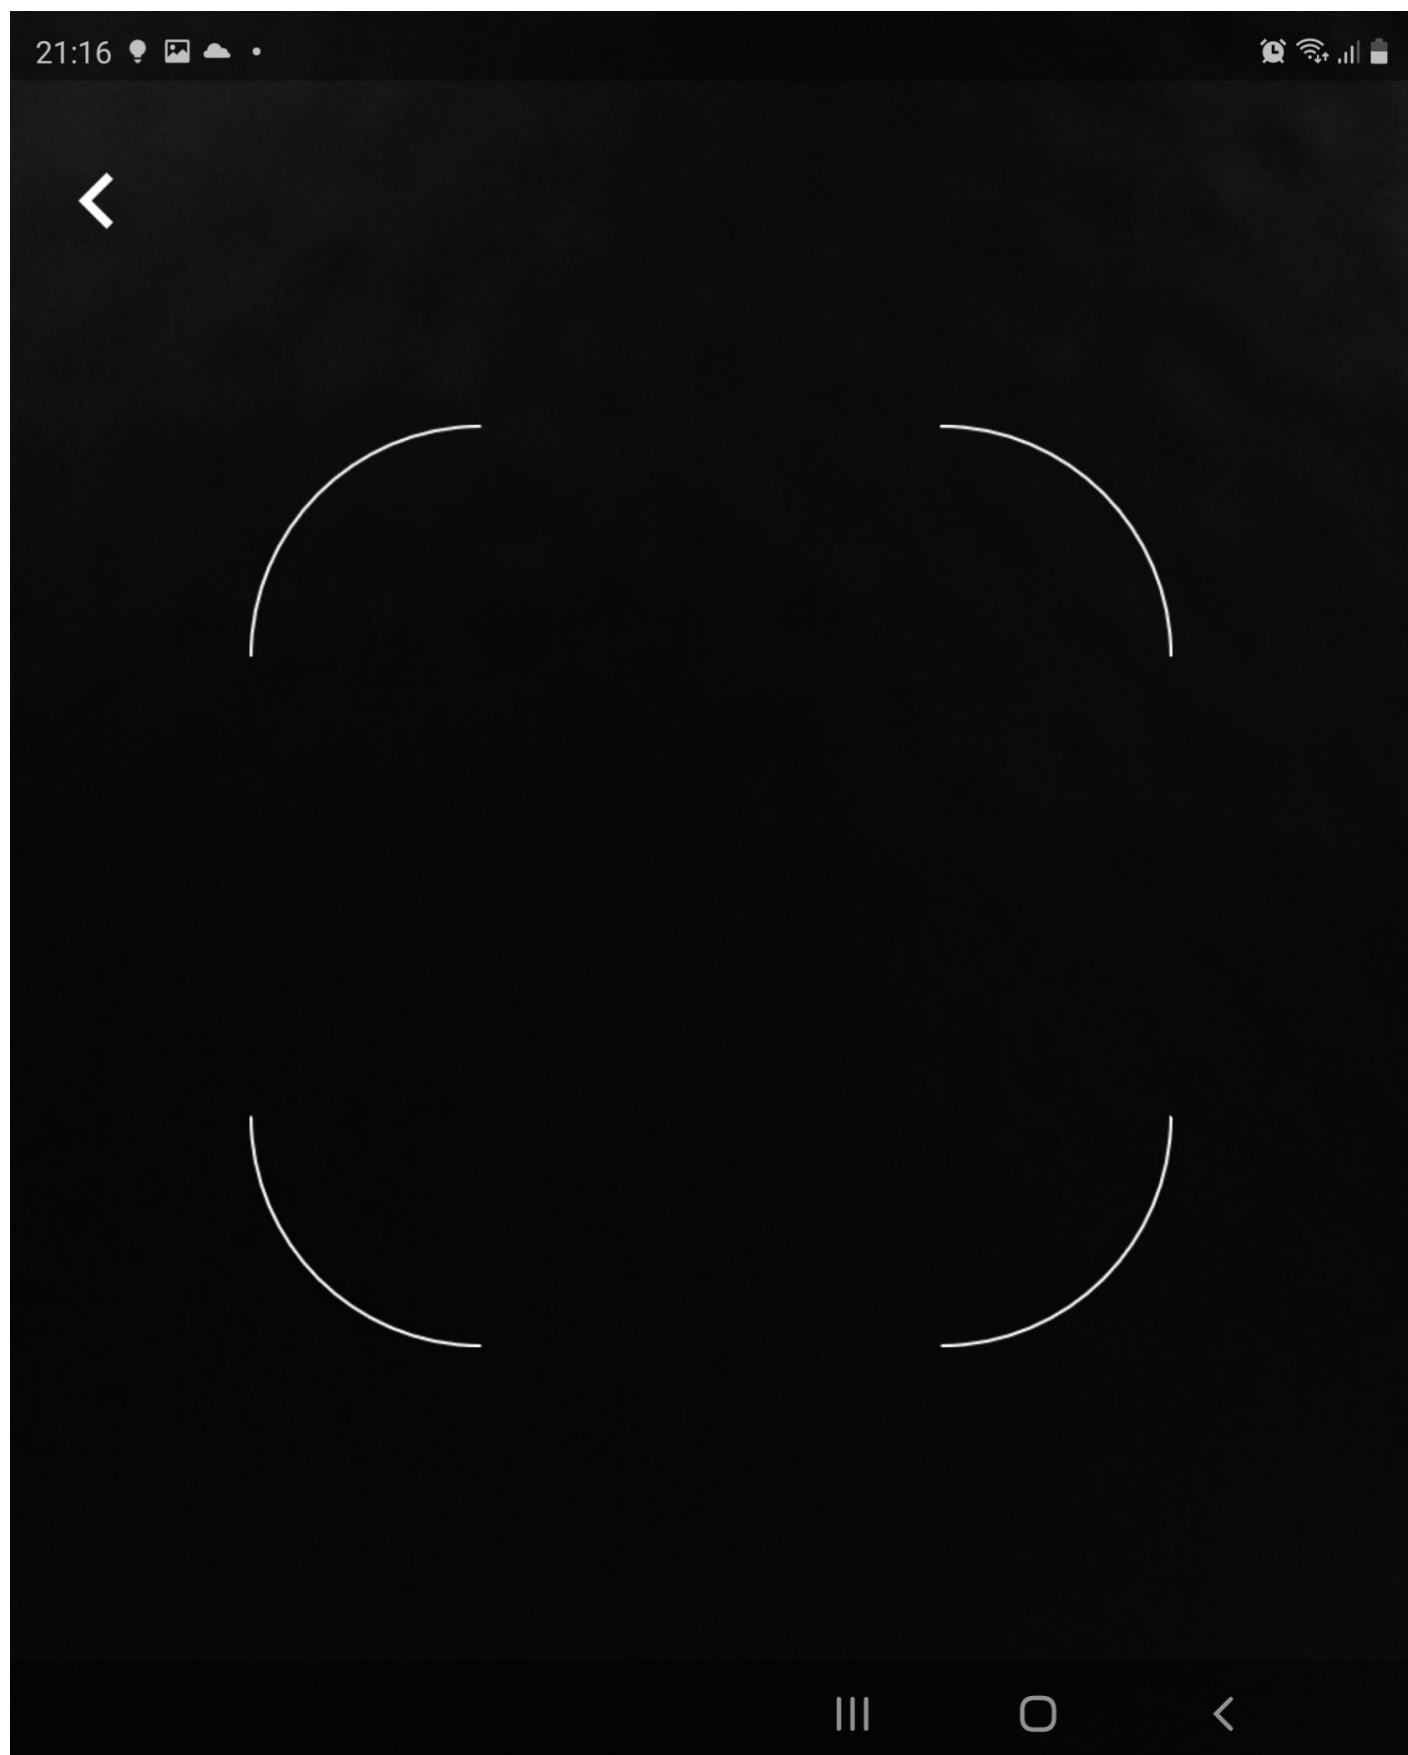



From the tile menu you can click on the button to launch the QR code





21:46






<

SMART  
JOBSITE







PLAN  
MANAGE  
REPORT


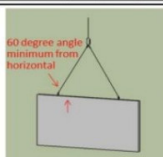


WO 01295

Elingage

Typical Products: Beams and Walls (including Teimwall, Sandwich Panels and Solid Wall)

Recommended Equipment					
2 Leg Chains	3 Leg Chains	4 Leg Chains	Equaliser	Beam	Air-hoist
					
1	0	0	0	0	0



Notes:  
Tilt table may first be required.

Lift Type  
1A

Number of Lifting Points  
2

Pitch unit from horizontal to vertical allowed?  
No

2 Point Lift – No Pitching

explore  
MANUFACTURING


1A

200 Kg

2 Lifting Points

riggig type 1a

Elements



1781A-WH05FA-206  
Walls  
0.00t


- the rigging informations

- the part informations




To start the lifting you can click on the button at the top right of the window.

You will go back to this window and the processing task will blink

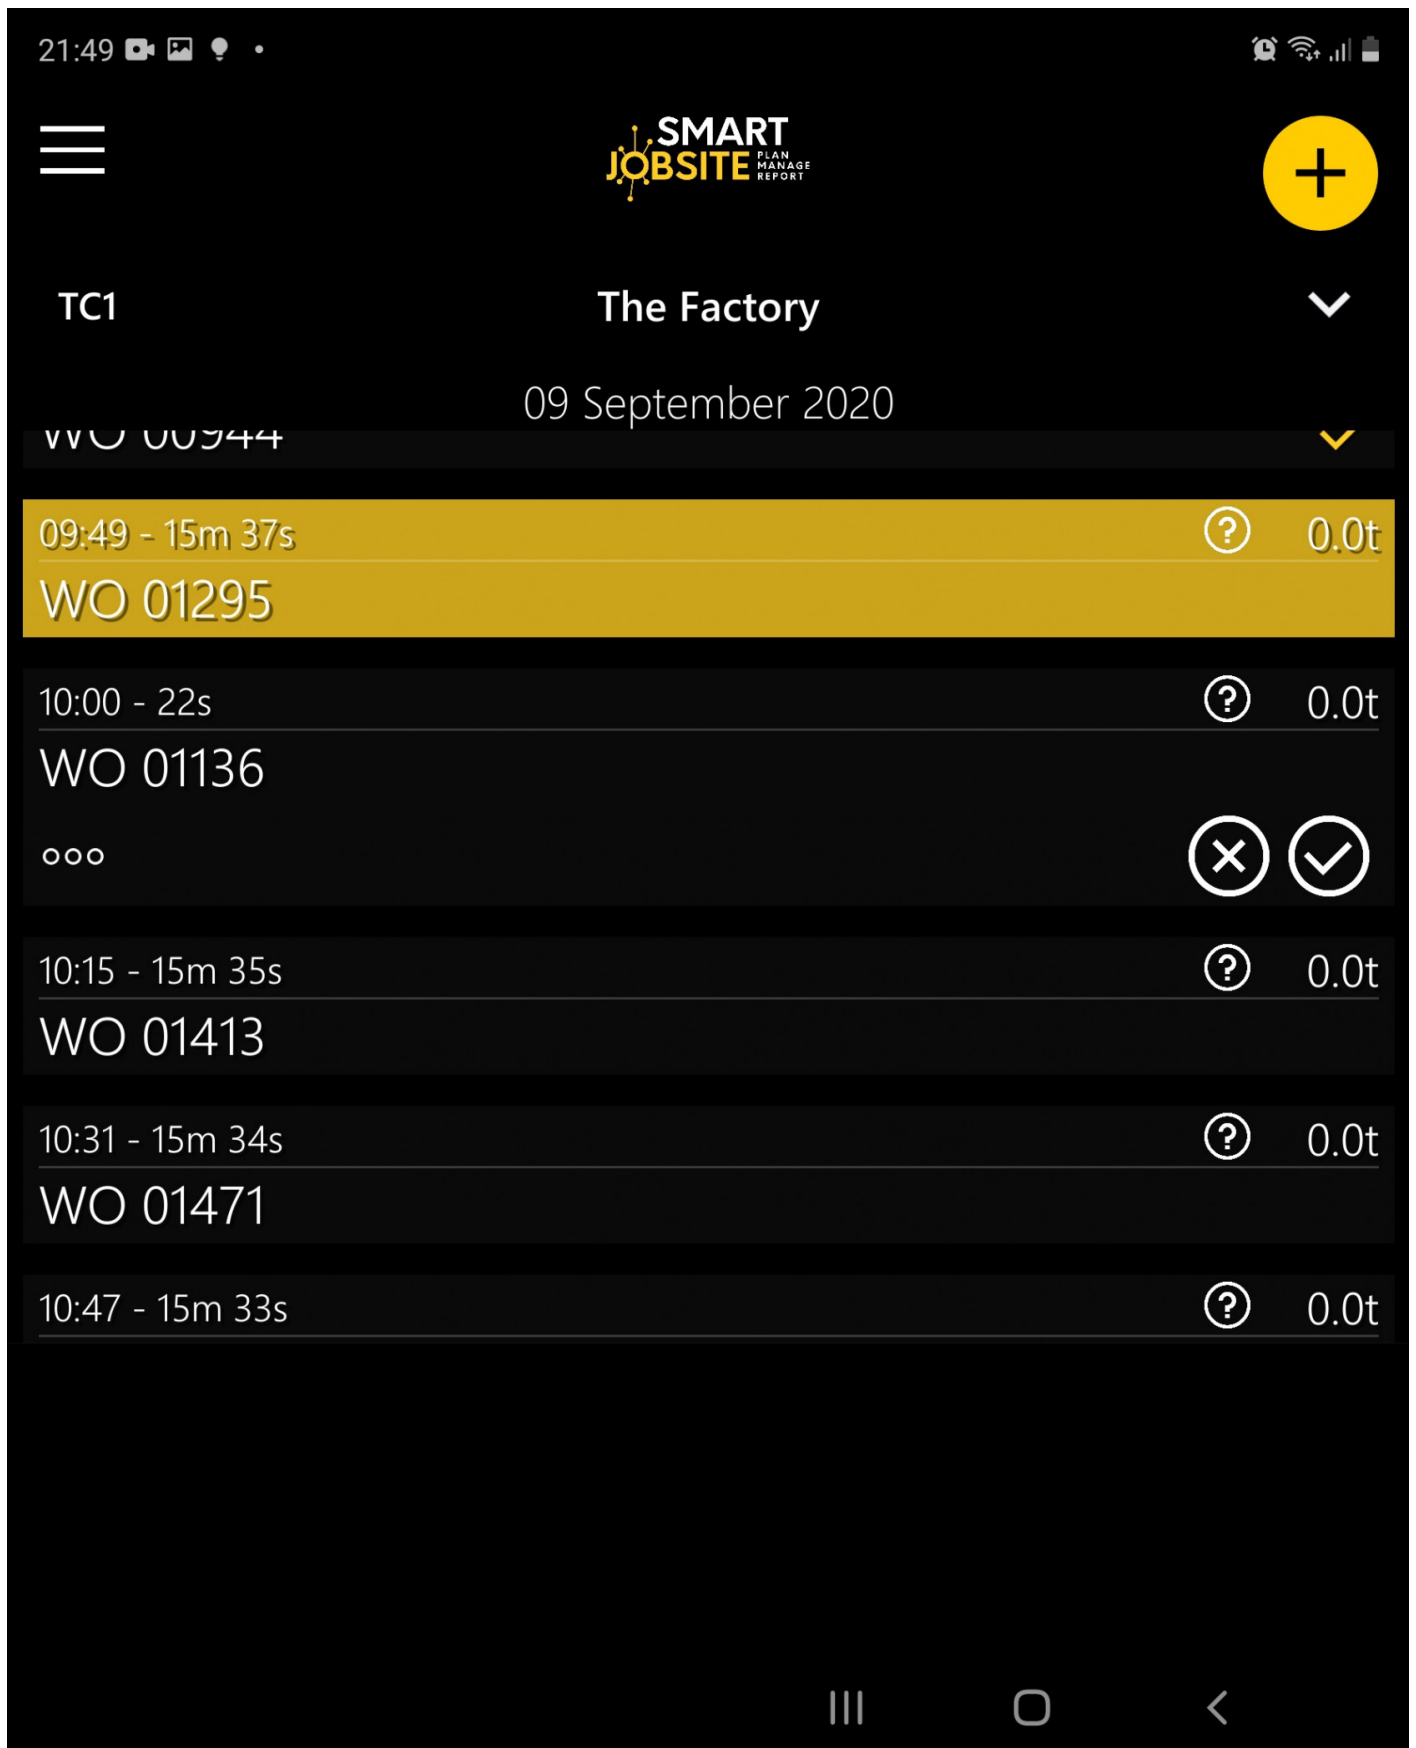


Add a new lift

 

To add a new lift you can click on the button. A new task will be created you can then edit it if you want


## refresh the tile

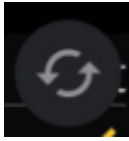


You can use the button to refresh the tile if needed

## Change jobsite or crane

The lifting plan tile is associated to a jobsite and a crane. You can access to the settings to change it.

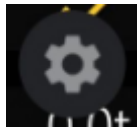


If you click on the setting button to access to the following page [

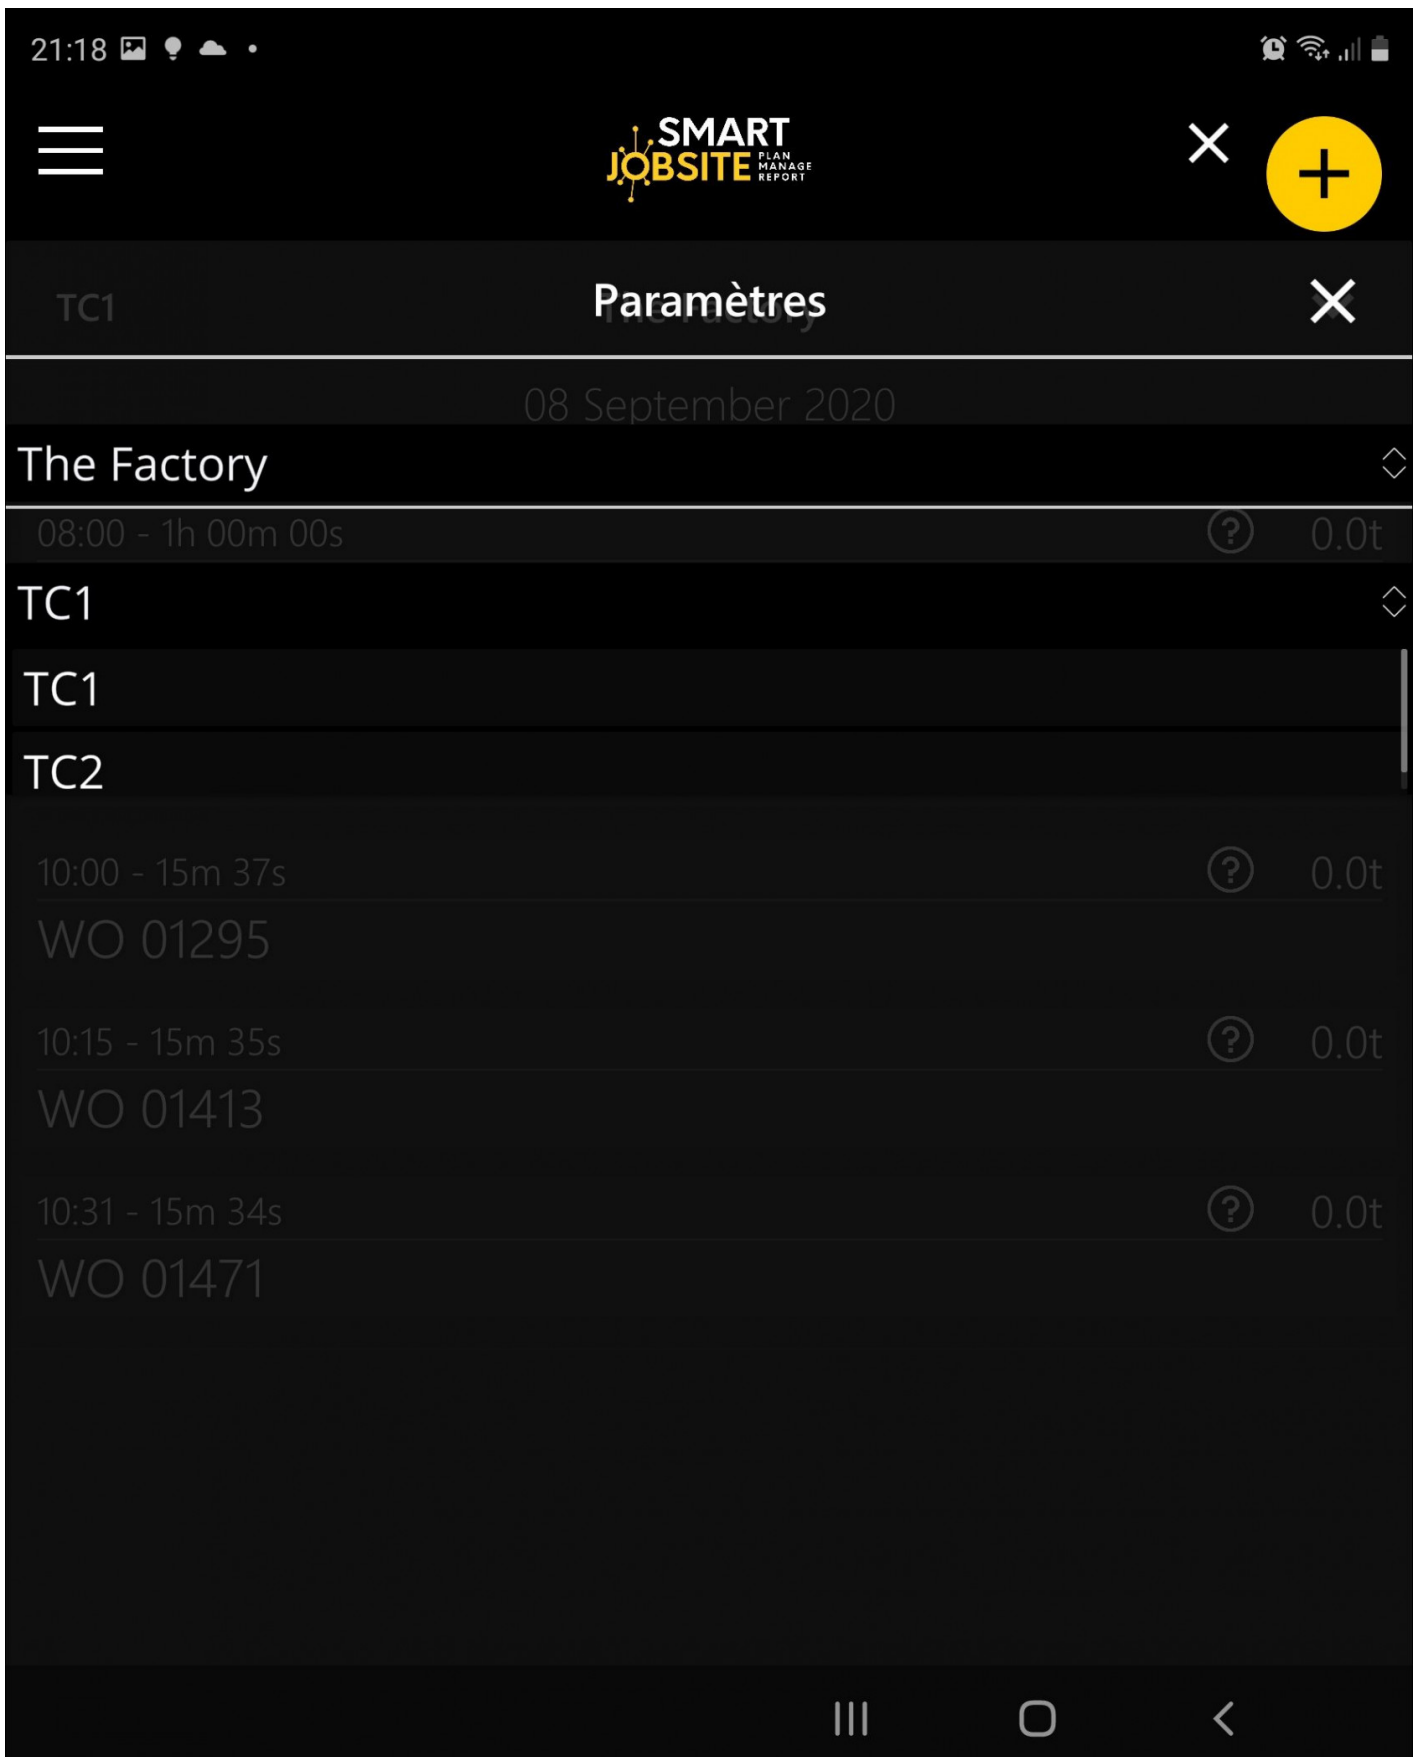

] (<https://bookstack.smartjobsite.com/uploads/images/gallery/2021-01/image-1611262417014.jpg>)

You can use the two dropdowns to change the Jobsite and / or the crane

## Delete the tile

 

You can use the button

to delete the tile