

# User Data Base


- User database

# User database


## How to manage the user database

The user database contains all the user informations like load charts, rigging type, ...

Under the Smart Jobsite tab you can click on the User DB button

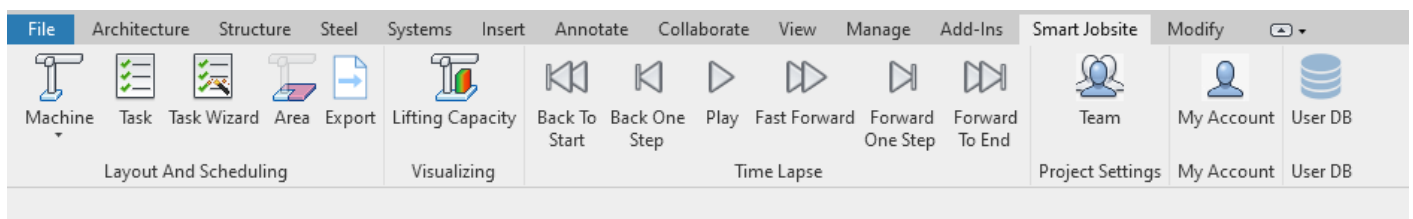

You will have access to the following panel

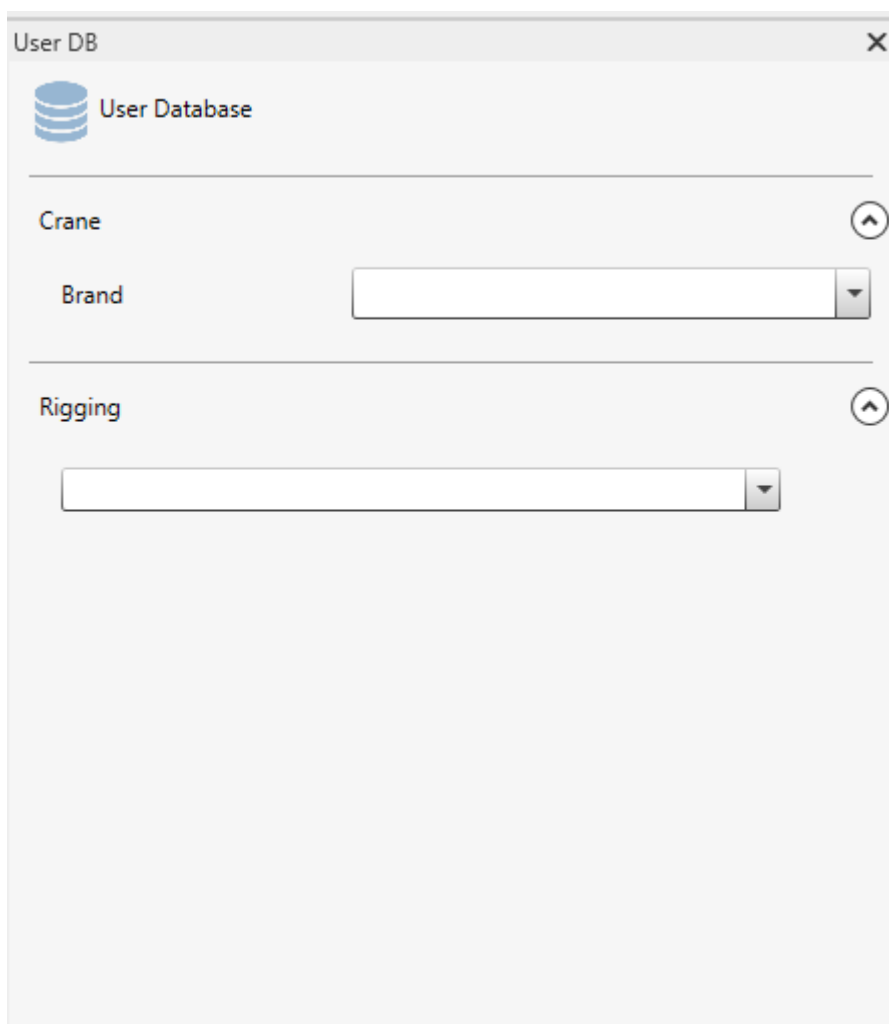

Under crane you can create/edit/delete load charts and crane engines properties.

User DB

User Database

Crane

Brand

Terex

Model

CTT 332-16

Engines

	Acceleration	Deceleration	Max. Speed
Lifting	1 m/s <sup>2</sup>	1 m/s <sup>2</sup>	5 m/s
Slewing	1 °/s <sup>2</sup>	1 °/s <sup>2</sup>	5 °/s
Trolley	1 m/s <sup>2</sup>	1 m/s <sup>2</sup>	5 m/s

Load Chart

Jib Length

25 m

Fall

2

Calculation

Linear

Load Chart

Radius (m)	Capacity (t)
5	15
10	15
20	12
25	10

Under rigging you can create/edit/delete rigging types

## Rigging



New Rigging



Name

New Rigging

Weight (kg)

0.00



Number Of Lifting Points

1



Description



Drop files here (JPG, PNG)

Select File