


# Lifting capacity

## How to use the lifting capacity feature

The lifting capacity will use the load chart data to calculate the crane capacity for each tasks. On the 3D you will see different color level to help you to visualize the crane capacity.

Smart Jobsite need the tasks weight to do the calculation. The weight is automatically calculated when you setup material for the elements. You can also change the weight by editing the elements on the schedule panel

Under the Smart Jobsite tab you can click on the Lifting capacity to enable to feature

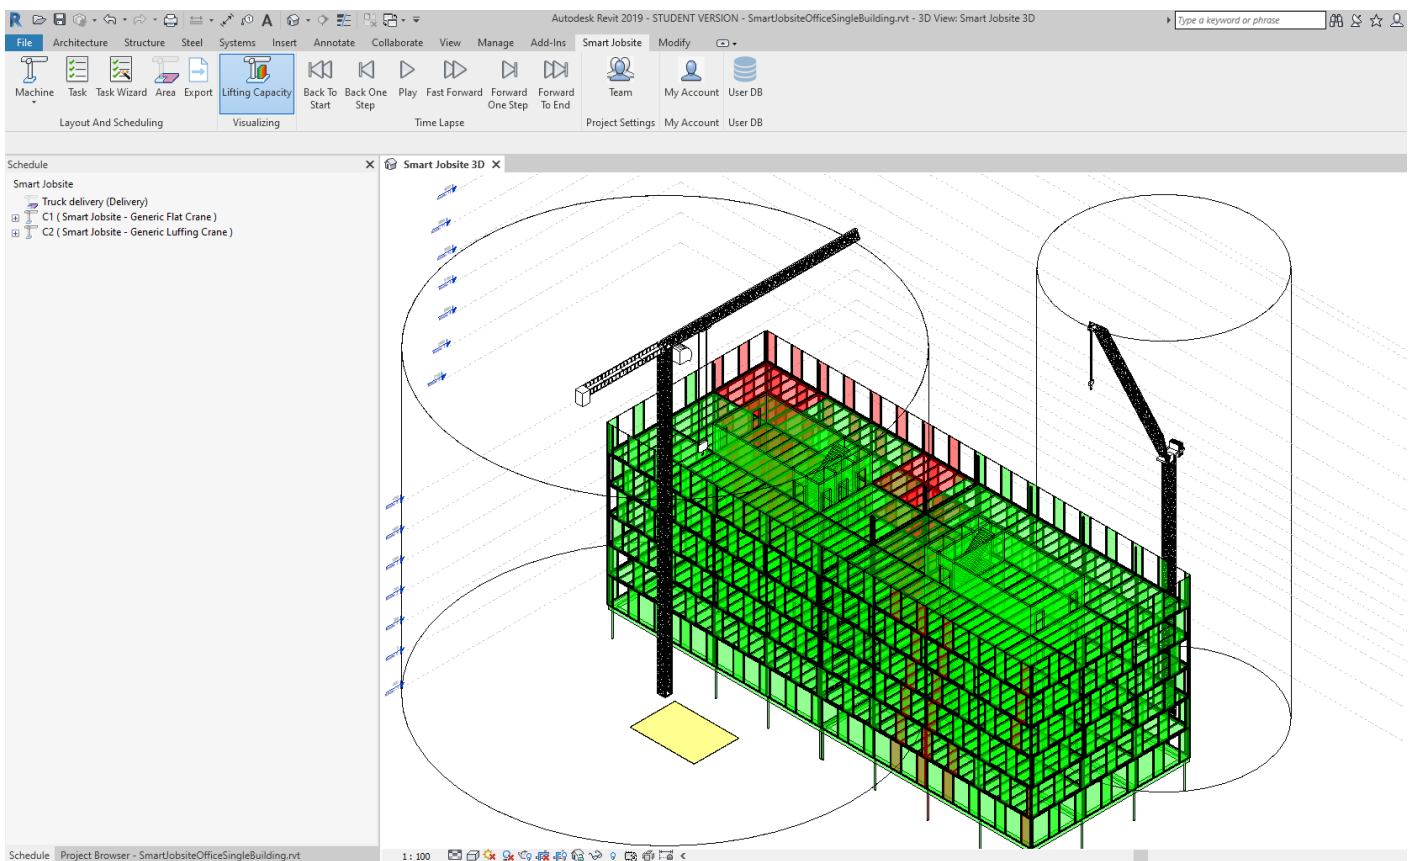

Revision #1

Created 1 December 2020 22:13:09 by Kevin

Updated 1 December 2020 22:22:41 by Kevin