


# Project location

## Project location


Smart Jobsite uses gps coordinates to position the building, machines, areas, ...  
That's why it is very important to define the location of your project before you start using Smart Jobsite.

### Revit Location

Under the "Manage" tab you can click on "Location"

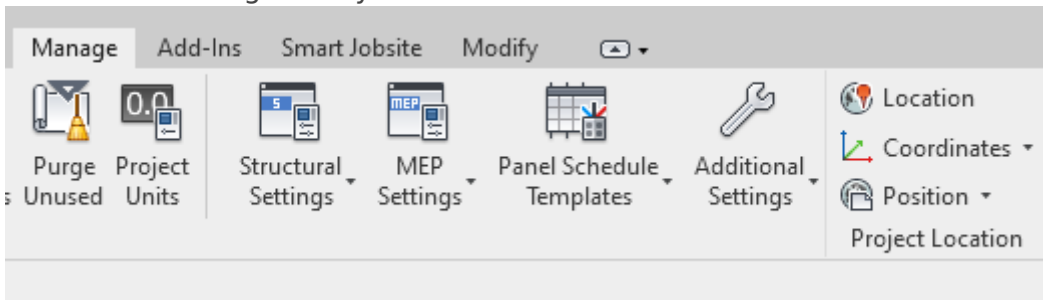


The following panel will open

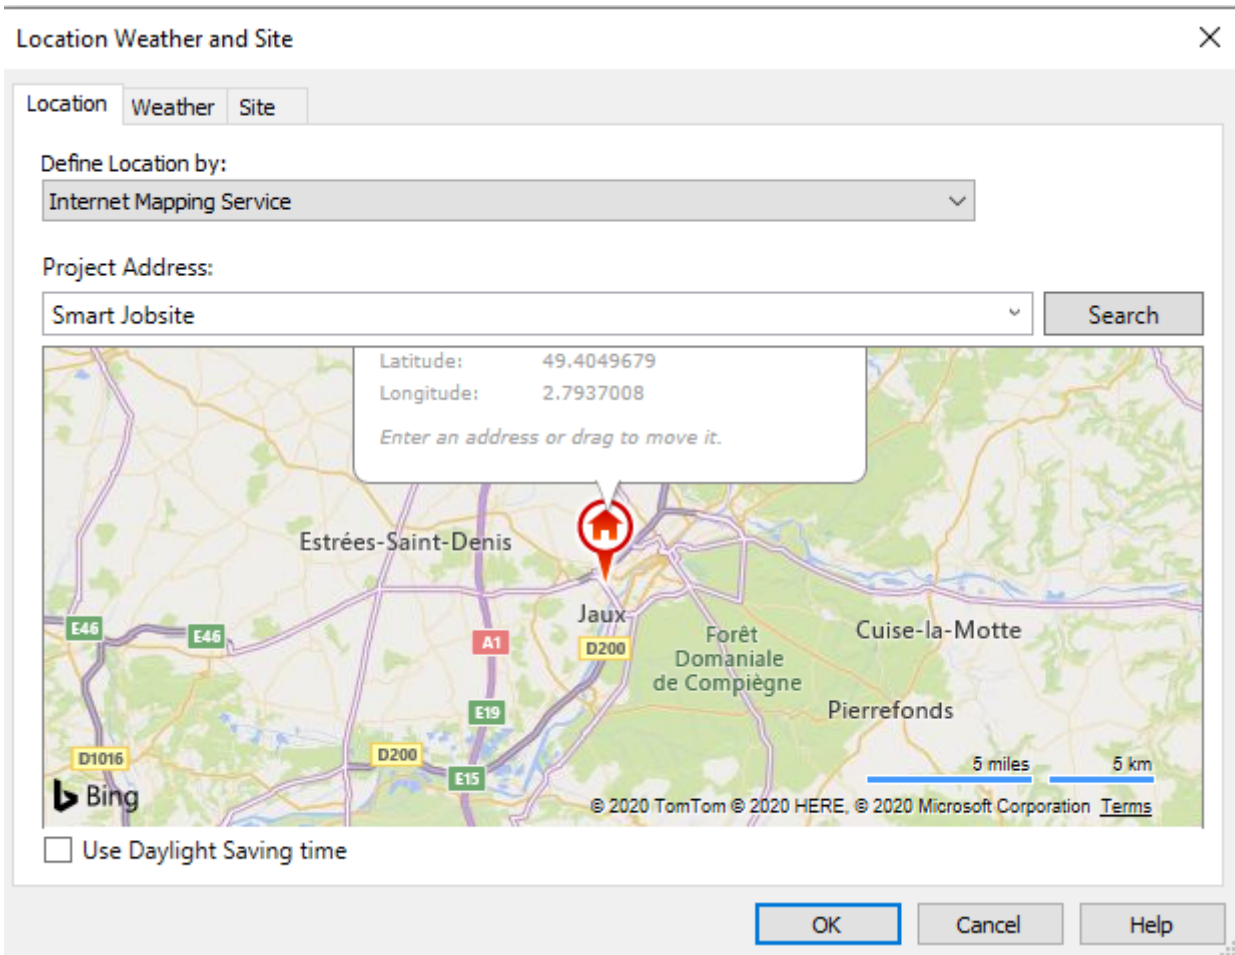


You can position you jobsite using an adress or GPS coordinates.

## Project base point and survey point


Revit give you the opportunity to setup two points to position your project. You can edit theses points with Smart Jobsite. To do this click on the Smart Jobsite Tab

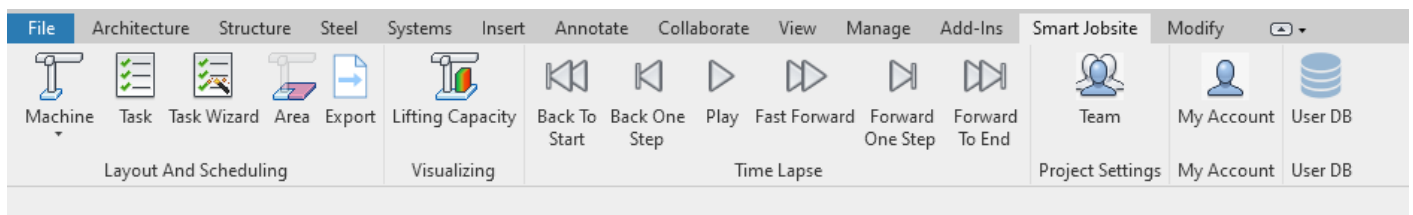


You will have acces to the Schedule Panel

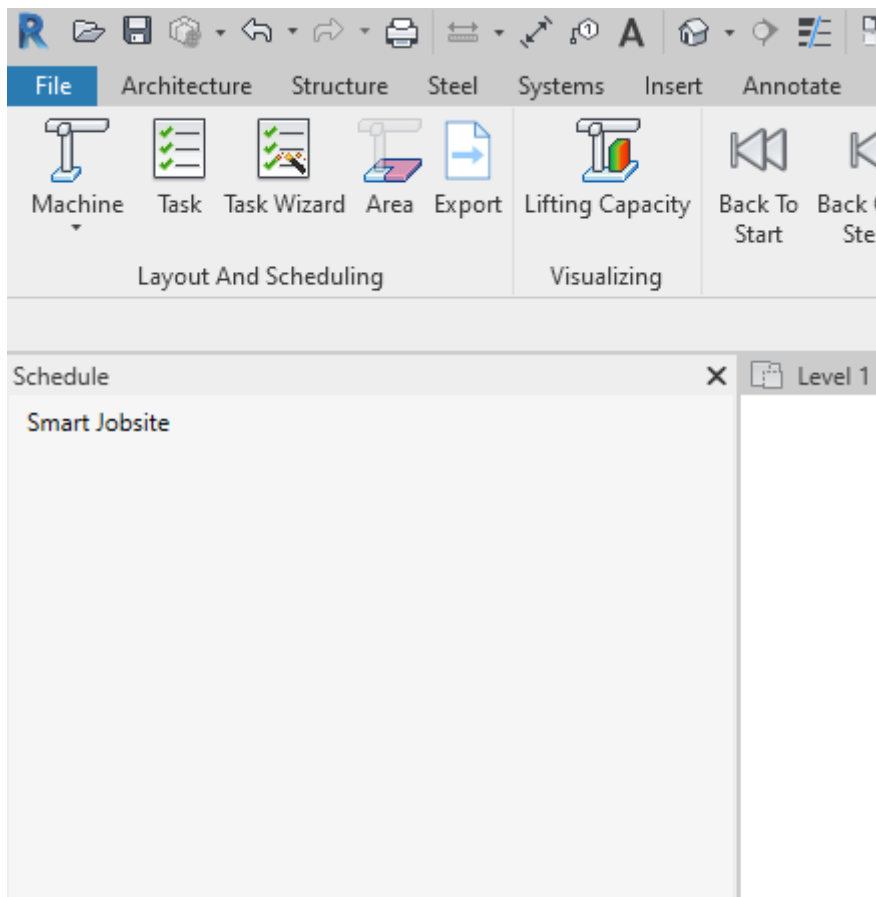

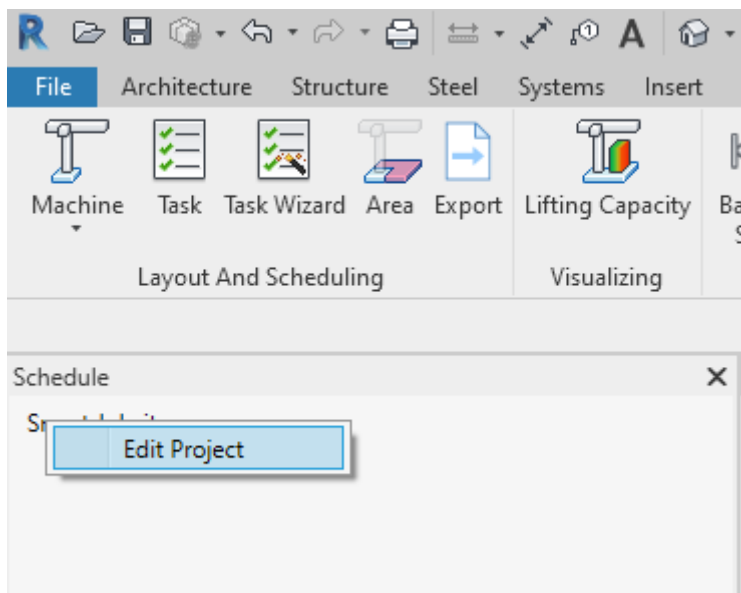

You can "right click" on you project name and click on "Edit project"



Project

Project





Name


Smart Jobsite


Planned Date

Tuesday, 01 December 2020

15

Location





Project Base Point

☐



Latitude

42.41486359





Longitude

-71.25807190





Altitude


0.00



True North Offset

0.00

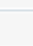



Survey Point

☐

 

Latitude

42.41486359



Longitude

-71.25807190



Altitude

0

You will access to the project settings. Under Location you can enable the project base point and Survey point so you can see them on the 3D view.  
You can also change the coordinates

#### Warning

SmartJobsite will use the project base point as default location for the cranes. If your points are too far away from your building when you will instantiate a crane, you won't be able to see it.

Revision #3

Created 1 December 2020 19:15:03 by Kevin

Updated 1 December 2020 20:30:23 by Kevin