


User database


How to manage the user database

The user database contains all the user informations like load charts, rigging type, ...

Under the Smart Jobsite tab you can click on the User DB button

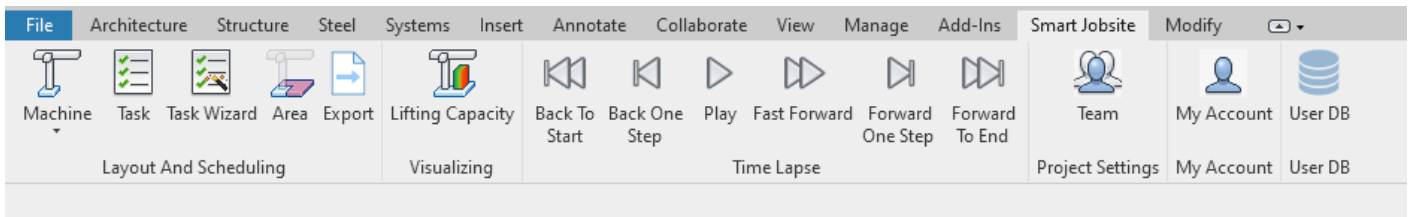


You will have access to the following panel

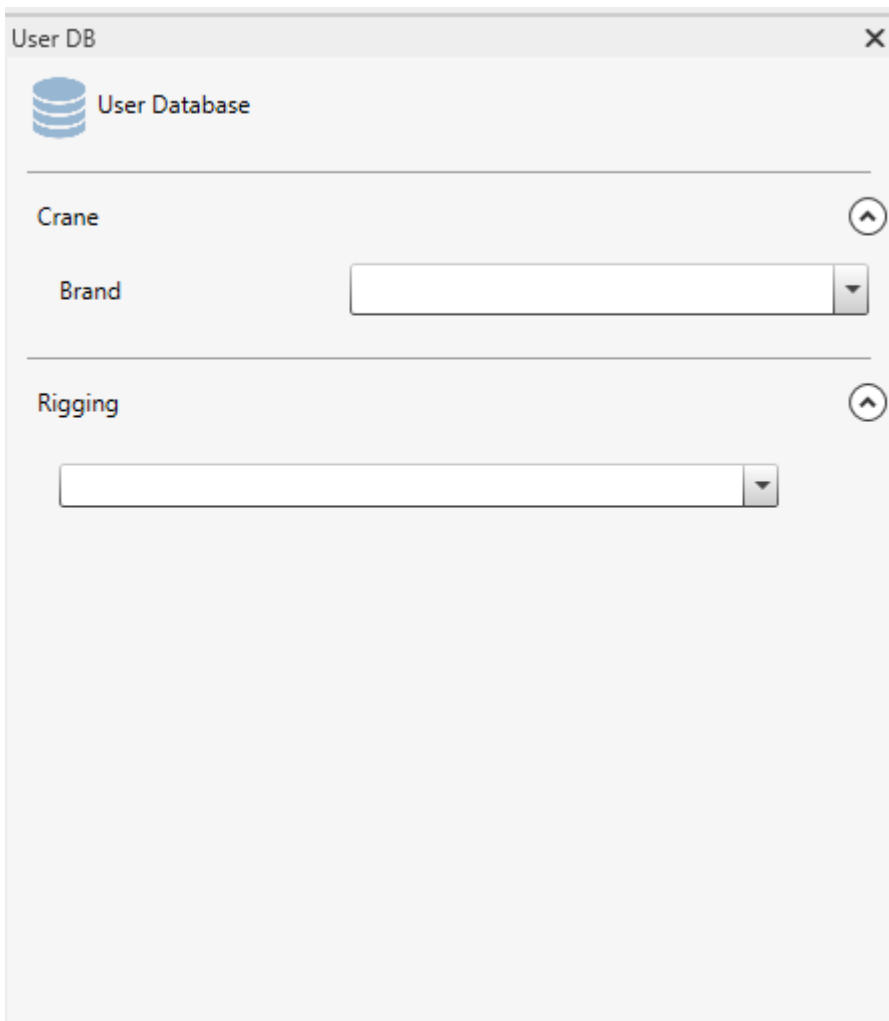

Under crane you can create/edit/delete load charts and crane engines properties.

User DB ✕

 User Database

Crane ⬆

Brand

Model

Engines ⬆

	Acceleration	Deceleration	Max. Speed
Lifting	1 m/s ²	1 m/s ²	5 m/s
Slewing	1 °/s ²	1 °/s ²	5 °/s
Trolley	1 m/s ²	1 m/s ²	5 m/s

Load Chart ⬆

Jib Length

Fall

Calculation

Radius (m)	Capacity (t)
5	15
10	15
20	12
25	10

Under rigging you can create/edit/delete rigging types

Rigging



New Rigging



Name

New Rigging

Weight (kg)

0.00



Number Of Lifting Points

1



Description



Drop files here (JPG, PNG)

Select File

Revision #1

Created 1 December 2020 22:31:00 by Kevin

Updated 1 December 2020 22:38:24 by Kevin